


Functional Diagram

A signal flow diagram of the ADMS 44.22 (configured as a Master) is shown below:

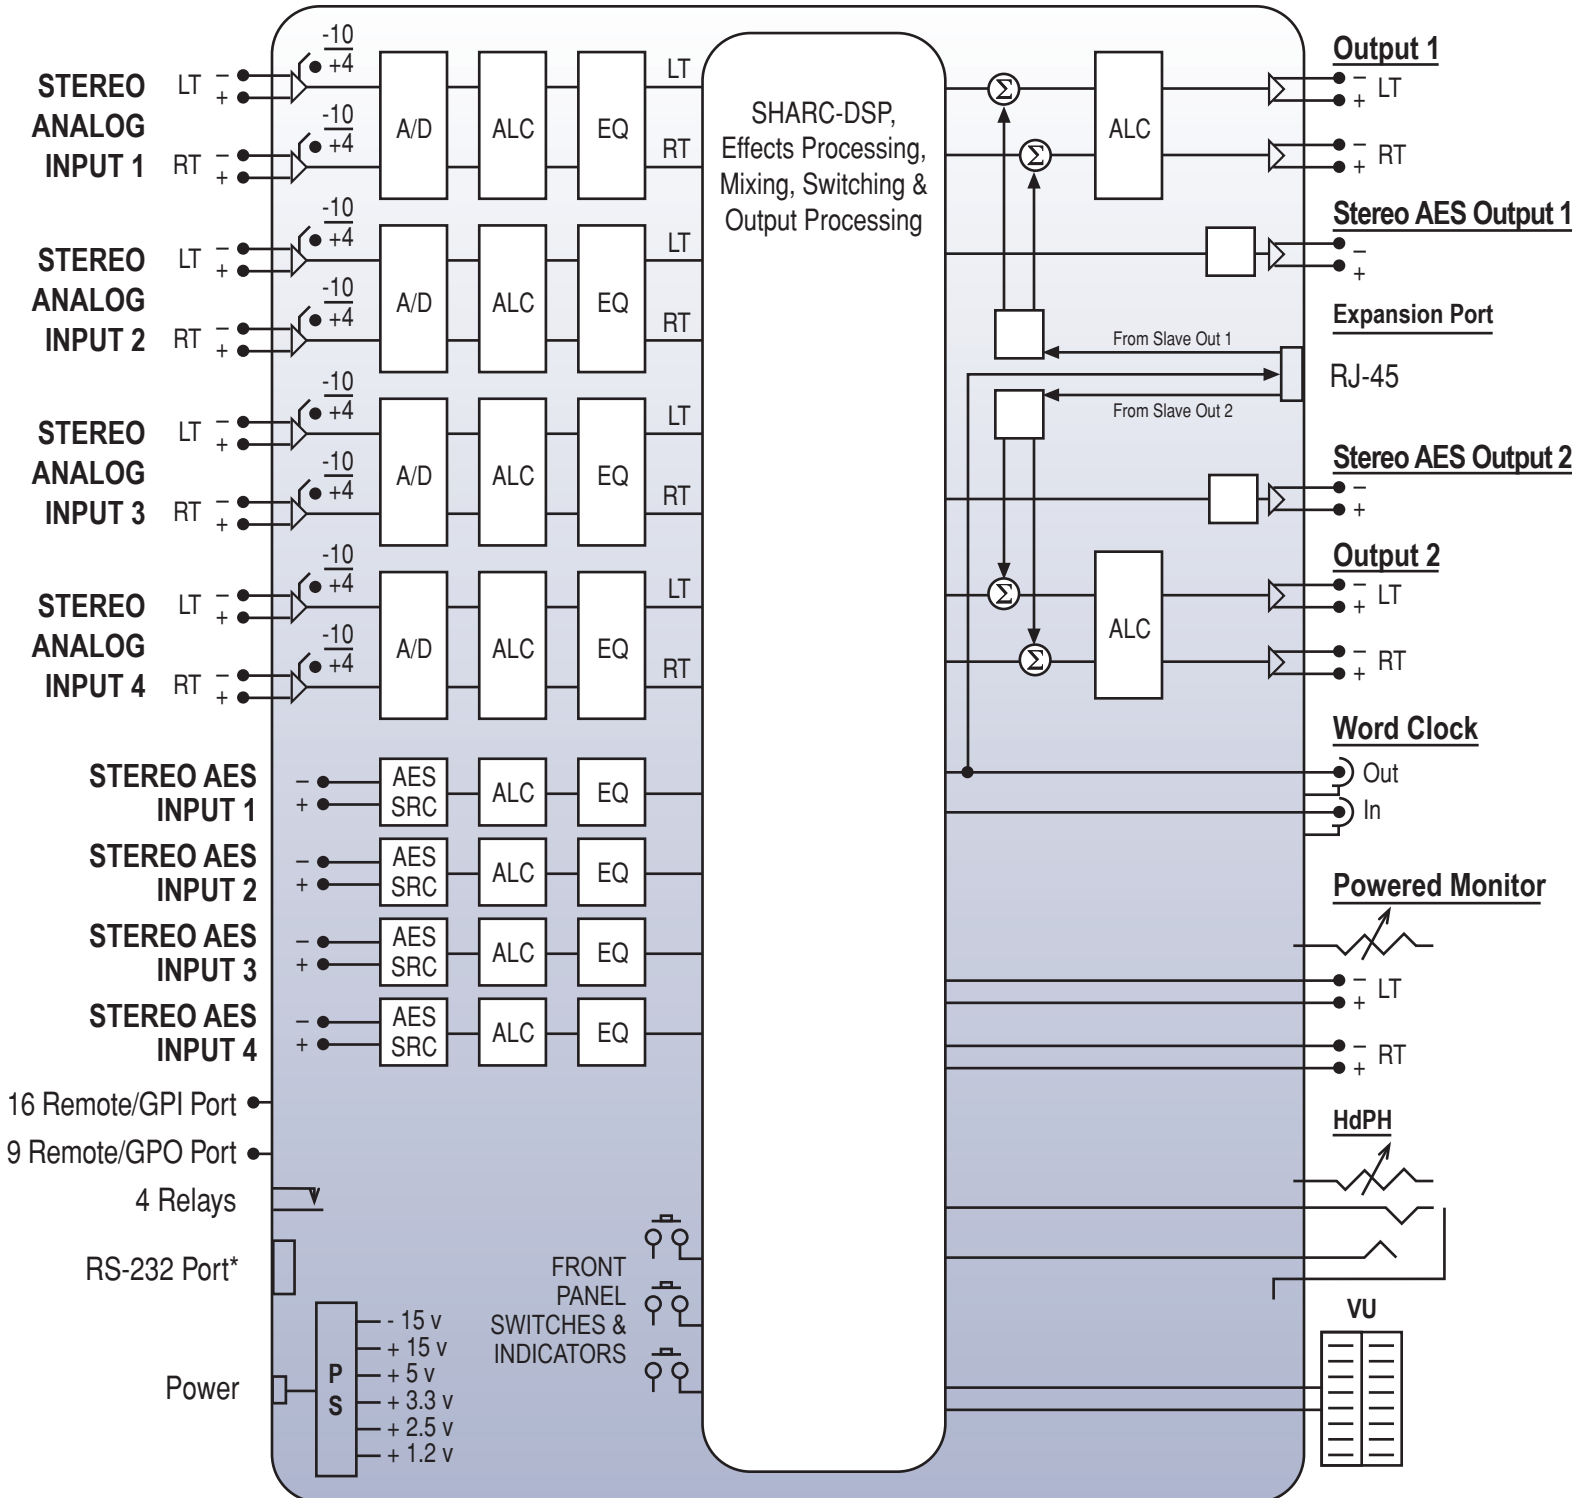

* Optional Broadcast Tools® USB-RS232 Smart Adapter Cable or ESS-1 Ethernet to Serial adapter.