

Installation and Operation Manual

for the

IPC-2, Twin stereo level matching interface

Copyright © 1996 by Broadcast Tools, Inc. All rights reserved. Except as permitted under the United States Copyright Act of 1976, no part of this document may be reproduced or distributed without permission

All specifications and features for this product are subject to change without notice.

Manual Revised 06/23/99

TABLE OF CONTENT

Sections	Page Number
Introduction	3
Safety Information	3
Who to contact for help	3
Warranty	4
Equipment Specifications	5
Product Description	6
Installation	6-7
Component Layout	8

INTRODUCTION

Thank you for your purchase of a Broadcast Tools, Inc., IPC-2, Twin stereo level matching interface. We're confident this product will give you many years of dependable service. This manual is intended to give you all the information needed to install and operate the unit.



NOTE: This manual should be read thoroughly before installation and operation.

SAFTEY INFORMATION

Broadcast Tools products should be installed only by qualified personnel. Incorrect or inappropriate use and/or installation could result in a hazardous condition.

Broadcast Tools Products, as any electronic device, can fail without warning. Do not use this product in applications where a life threatening condition could result due to failure.

WHO TO CONTACT FOR HELP

If you have any questions regarding your product, or you need assistance, please contact your distributor from whom you purchased this equipment or contact us directly.

If you would like more information about Broadcast Tools, Inc., products, you may reach us at:

Broadcast Tools, Inc. 131 State Street Sedro Woolley, WA 98284

Voice 360 . 854. 9559 Fax 360 . 854. 9479

Internet Home Page www.broadcasttools.com

Email support@broadcasttools.com

Thank you for choosing Broadcast Tools!

BROADCAST TOOLS, INC. LIMITED WARRANTY AND REMEDIES

LIMITED WARRANTY

The term "Buyer" as used in this document refers to and includes both (but only) (a) any person or entity who acquires such an item for the purpose of resale to others (i.e., a dealer or distributor of an item), and (b) the first person or entity who acquires such an item for such person's or entity's own use.

Broadcast Tools warrants to each Buyer of any item manufactured by Broadcast Tools that the item will be free from defects in materials and workmanship at the time its is shipped by Broadcast Tools if the item is properly installed, used and maintained.

EXCLUSIVE REMEDIES

If Broadcast Tools is notified of in writing of a failure of any item manufactured by Broadcast Tools to conform to the foregoing Limited Warranty within one (1) year following the date of the Buyer's acquisition of the item, and if the item is returned in to Broadcast Tools in accordance with Broadcast Tools' instructions for confirmation by inspection of the defect (which at Broadcast Tools' election may include, without limitation, a requirement that the Buyer first obtain a Return Authorization number from Broadcast Tools, that the Buyer furnish proof of purchase in the form of an invoice and/or receipt, and that the Buyer prepay all freight charges associated with any return of the item to Broadcast Tools using such freight service as Broadcast Tools reasonably may specify), Broadcast Tools will repair or replace the defective item, or will refund the purchase price paid by the Buyer for the item. Broadcast Tools shall have the exclusive right to choose between these alternative remedies.

NO OTHER WARRANTIES OR REMEDIES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BROADCAST TOOLS AND ITS SUPPLIERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; AND THE FOREGOING ALTERNATIVE REMEDIES SHALL BE EXCLUSIVE OF ALL OTHER REMEDIES. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NEITHER BROADCAST TOOLS NOR ANY OF ITS SUPPLIERS SHALL HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ANY DAMAGES FOR LOST PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA OR INFORMATION, COST OF CAPITAL, CLAIMS OF CUSTOMERS, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR THE INABILITY TO USE ANY ITEM SUPPLIED BY BROADCAST TOOLS), EVEN IF BROADCAST TOOLS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER A CLAIM IS ONE ALLEGING BREACH OF A CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT, FOR THE VIOLATION OF ANY STATUTORY DUTY, THE FAILURE OF ANY LIMITED OR EXCLUSIVE REMEDY TO ACHIEVE ITS ESSENTIAL PURPOSE, OR ANY OTHER CLAIM OF ANY NATURE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, THIS LIMITATION MAY NOT APPLY TO YOU.

BROADCAST TOOLS, INC. 131 State Street Sedro Woolley, WA 98284

Voice 360.854.9559 Fax 360.854.9479

Installation and Operation Manual Broadcast Tools, Inc. Page 4

SPECIFICATIONS

IHF Input Level -10dBv Nom, @ 23K Ω , Hi Gain -20dBv @ 10K Ω

Gain 6 to 30db

Professional output level +4dBu nom, + 24dBu max, @ 600Ω , Active balanced

Frequency Response DC to 20kHz, +/- 0.25dB

Noise 87dB below nom, output

THD .007% any frequency

IMD (250/7kHz) .009%

Interfacing IHF Inputs - Gold Phono Jacks (RCA)

Professional Outputs - Removable screw terminals

Power Requirement 16.5 Vac, 600 ma, wall transformer, Supplied.

Dimensions 7.75"W x 1.00"H x 4.00"D.

Weight 2.0 lb.

PRODUCT DESCRIPTION

The IPC-2 is a twin active IHF to professional stereo level-matching interface. The IPC-2 is designed to interface twin IHF consumer (-10dBv or -20dBv) products with professional (+4/+8dBu) audio equipment. The IPC-2 is equipped with twin stereo output level controls. The IHF inputs feature gold plated phone (RCA) jacks, while the professional outputs are provided with removable screw terminals and are active balanced insuring immunity from hum and RF pick-up. The direct-coupled circuitry provides for sonic transparency.

APPLICATIONS

Twin active IHF to professional stereo level-matching interface for digital audio systems, R-Dat, Mini-Disk, Cassette, CD player, etc.

POWER

2.1mm coaxial type (barrel) power connector and 16.5Vac @ 600ma wall transformer. (220 Vac 50-60 Hz wall transformer OPTIONAL)

PROFESSIONAL OUTPUT CONNECTORS

Removable Screw Terminals

IHF INPUT CONNECTORS

Gold phono (RCA) connectors

INSTALLATION

Installation of the IPC-2 in <u>high RF environments</u> should be performed with care. Shielded cable is suggested for all audio inputs and outputs. All shields should be tied to the Ground terminals. The station ground should be connected to the chassis ground screw located on the far right side of the IPC-2 as viewed from the rear. It is recommended that all cables connected to the IPC-2 be looped through ferrite cores to suppress RF. Surge protection with RF filtering such as the Tripp Lite "ISOBAR 4 or 6" is also suggested for the wall transformer.

The IPC-2 is a breeze to install. The professional outputs are connected via removable screw terminals. Installation of the IPC-2 consists of five steps:

- 1. Inspection
- 2. Bench test
- 3. Mount the unit
- 4. Connect your equipment to the unit
- 5. Adjust levels

INSTALLATION, cont.

STEP 1: INSPECTION

Please examine your IPC-2 carefully for any damage that may have been sustained during shipping. If any is noted, please notify the shipper immediately. Retain the packaging for inspection by the shipper. The package should contain the IPC-2, 16.5Vac @ 600ma wall power transformer and this manual.

STEP 2: BENCH TEST

Place the IPC-2 on a workspace and connect power to the unit. Check to see if the power LED is lit.

- 1 Connect the "IHF" test signal to the IPC-2 "IHF" input phono jacks.
- 2 Connect the IPC-2 "PRO" outputs to your test equipment.

Verify that the audio signals are present. Repeat the process until each channel's operation has been verified. Remove all cables and install at the desired location

STEP 3: MOUNTING

Mount the unit allowing adequate airflow for cooling.

STEP 4: CONNECT YOUR EQUIPMENT

- 1 Connect the "IHF" source to the IPC-2 "IHF" input phono jacks.
- 2 Connect the IPC-2 "PRO" outputs to the desired Professional inputs.

STEP 5: SET LEVELS

Adjust the level controls to the required level.

NOTE: Theses adjustments are reversed. If more gain is needed, install the "HI-Gain" jumpers for each channel. Jumper descriptions are below.

- * IHF # 1 left input "HI-Gain jumper, install Jp-1
- * IHF # 1 right input "HI-Gain jumper, install Jp-2
- * IHF # 2 left input "HI-Gain jumper, install Jp-5
- * IHF # 2 right input "HI-Gain jumper, install Jp-4

MONAURAL JUMPERS

- * Jumper Jp-3 monaural setup for converter # 1
- * Jumper Jp-6 monaural setup for converter # 2