



Installation and Operation Manual



WVRC-4

Four Channel Web Voice Dial-up Remote Control System

Network Agent Version 3.68

Manual Update: 07/13/2011

PIC Firmware Version 1.12 or above

If you need a firmware upgrade, contact Broadcast Tools®

No part of this document may be reproduced or distributed without permission.
ALL SPECIFICATIONS AND FEATURES FOR THIS PRODUCT ARE SUBJECT TO
CHANGE WITHOUT NOTICE

NOTE: We recommend the use of Chrome, Firefox or Safari as your browser.

Due to the dynamic nature of product design, the information contained in this document is subject to change without notice. Broadcast Tools, Inc., assumes no responsibility for errors and/or omissions contained in this document. Revisions of this information or new editions may be issued to incorporate such changes.

*Broadcast Tools® is a registered trademark of Broadcast Tools, Inc.
All Sentinel™ labeled products are a trademark of Broadcast Tools, Inc.
Copyright © 1989 - 2015 by Broadcast Tools, Inc. All rights reserved.
No part of this document may be reproduced or distributed without permission.*


Visit www.broadcasttools.com for important product update information.

Table of Contents

Section Title	Page #
Introduction	3
Safety Information.....	3
Who to Contact for Help	4
Product Overview.....	4
Inspection.....	5
Installation	5
Dial-up Programming	10
Installing Factory Defaults	10
Program Menu	11
Menu Navigator	12
Dial Out Numbers.....	12
Dial Out List.....	13
Settings.....	13
Access Code	14
Lap.....	14
Repeat.....	14
Silence Sensor	14
Power Fail	14
HU	14
Monitor Access Code	14
Analog Debounce Timer.....	14
Pager Numbers and Data Strings	15
Analog (metering) Setup	15
Status Setup.....	17
Recording Voice Prompts.....	18
Configure DIP Switch Settings	18
Dial-up Operation.....	21
WEB and Dial-Up Notice	22
Web Setup	23
Configuration Info	23
Ethernet Setup	25
Firmware.....	26
Java Applet.....	26
Main Screen	27
Login Dialog	28
User Setup Dialog	28
System Setup Dialog.....	29
Network Setup Dialog.....	30
Schedule Setup Dialog.....	31
Schedule Detail Dialog	32
Analog (metering) Setup Dialog	33
Status/Relay Setup Dialog	33
Virtual Channel Setup Dialog	34
About Dialog.....	35
Specifications.....	36
Warranty.....	37
Declaration of Conformity	38
Connection Suggestion.....	Appendix

WEBSITE:

Visit our web site for product updates and additional information.

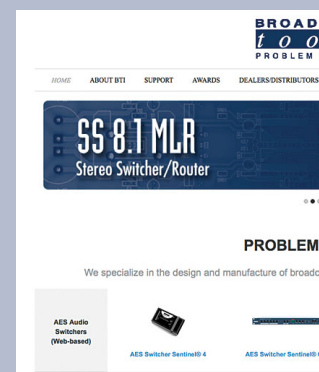

INDEX

INTRODUCTION

Thank you for your purchase of a Broadcast Tools® WVRC-4, Four Channel WEB and Voice Dial-up Remote Control System (referred to as the WVRC-4 throughout this manual). We're confident that this product should give you many years of dependable service. This manual is intended to give you all the information needed to install and operate the Broadcast Tools® WVRC-4.

SAFETY INFORMATION

Only qualified technical personnel should install the WVRC-4. Any attempt to install this device by a person who is not technically qualified could result in a hazardous condition to the installer or other personnel, and/or damage to the WVRC-4 or other equipment. Broadcast transmitters can operate at voltages that are potentially lethal. Please ensure that proper safety precautions have been made before installing this device. If you are unfamiliar with this type of equipment, please contact a properly qualified engineer to handle the installation and setup of the WVRC-4.

For additional safety, it is strongly recommended that, in addition to setting the WVRC-4 in to OP/PGM mode, the remote/local switch on any transmitter or high voltage equipment also be set to local mode.

While the WVRC-4's relays are physically capable of handling 250 VAC, this practice is extremely dangerous and should never be attempted. The pluggable euroblock screw terminals are not designed to shield humans from potentially dangerous voltages. Contact with high voltages can cause serious injury or death. The maximum recommended voltage for the WVRC-4 is 30V. Switching of high voltages should only be done external from the WVRC-4 and in a manner that isolates the voltages from accidental contact with humans.

WHO TO CONTACT FOR HELP

If you have any questions regarding your product or you need assistance, please contact your distributor from whom you purchased this equipment.

If you would like more information about Broadcast Tools® products, you may reach us at:

Broadcast Tools, Inc.

131 State Street

Sedro-Woolley, WA 98284-1540 USA

Voice: 360.854.9559

Fax: 866.783.1742

Internet Home Page: www.broadcasttools.com

E-mail: support@broadcasttools.com

THANK YOU FOR CHOOSING BROADCAST TOOLS® BRAND PRODUCTS!

Broadcast Tools is a Veteran Owned Business



Designed, Assembled and Supported in WA State, USA



CAUTION!

Broadcast Tools® Products, as with any electronic device, can fail without warning. Do not use this product in applications where a life threatening condition could result due to failure. Serious injury or death can occur if a command channel is activated while you are performing maintenance on your equipment. If you are performing maintenance on your equipment, you should press the "OP/PGM" button on the front panel of your WVRC-4 forcing the unit in to local mode. The "PGM" LED will illuminate. Local mode prevents the unit from performing relay commands.



NOTE:

This manual should be read thoroughly before installation and operation.

INTRODUCTION

Product Overview

The WVRC-4 provides a cost-effective, half-rack solution for web based and/or recordable voice response dial-up transmitter site control. The WVRC-4 was designed from a users point of view, so all of the basic functionality you need is included to control your site equipment, while including the accessories other manufacturers consider optional. Each analog (metering), status, silence sensor, temperature sensor and power failure input can be configured to email up to four individual email addresses, allowing different input alarms to be routed to different email recipients.

The WVRC-4 is equipped with a browser based 100-event program scheduler for relay control and alarm muting, along with an FIFO 8192-event alarm logger. The user can enable a sound effect to play when an out of tolerance alarm is generated. We have also provided SNMP capabilities to allow multiple units to be monitored with any SNMP manager software package.


The WVRC-4 is equipped with four high-resolution analog (metering) channels, while each of the four optically isolated status channels may be configured for 5 to 24vdc wet or dry (contact closures) status monitoring. The four control channels are equipped with independent SPDT one-amp relays for each raise/on and lower/off function for a total of eight relays. These relays may be latched, unlatched (Web mode only) or momentarily closed.

The WVRC-4 is supplied with spoken words and phrases in English, while the user is free to record words and phrases in any language. In addition, the WVRC-4 may be programmed for dial-up operation via HyperTerminal, while the Java applet programming can be performed using your favorite web browser.

System expansion may be accomplished by cascading multiple WVRC-4's on the same telephone line and/or Ethernet switch.

WEBSITE:

Visit our web site for product updates and additional information.

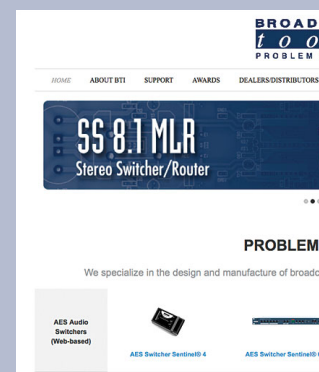

Inspection

Please examine your WVRC-4 carefully for any damage that may have been sustained during shipping. If any is noted, please notify the shipper immediately and retain the packaging for inspection by the shipper.

The package should contain the WVRC-4, this manual and/or CD, 25-foot temperature probe, 7 foot BLUE straight-through CAT 5 cable, 7 foot GRAY crossover CAT 5 cable, RJ-11 telephone cable, 7-foot DB-9 straight-through serial cable and the 12 VAC@1 amp wall transformer.

Installation

Surge Protection

The WVRC-4 has built-in resistance to voltage changes; we recommend that you use a power surge protector or line conditioner on the incoming AC line. Lightning strikes and other high surges in voltage levels will damage your WVRC-4 and connected equipment if it is not properly protected. For lightning protection devices, check out www.polyphaser.com and www.itwlinx.com.

UPS Standby Power System

We recommend that you connect your WVRC-4 to a UPS system. While all operating and user parameters are stored in non-volatile EEPROM, brownout conditions and lightning induced spikes can disable or damage equipment. A UPS helps minimize the risk to the WVRC-4 and has the added benefit that it will then be able to notify you of the power outage by email, phone or pager depending on your system configuration.



CAUTION!

Installation of the WVRC-4 in high RF environments should be performed with care. Shielded cable is suggested for all monitoring and control connections with all shields tied to the station ground terminal. The station ground should be connected to any available rear panel ground terminal or chassis ground screw using an 18 or 20-gauge wire.




Front panel indicators, controls and connectors


Name	Type	Description
K1 - K4 Raise	LED	Illuminates when corresponding raise relays are activated.
K1 - K4 Lower	LED	Illuminates when corresponding lower relays are activated.
Status 1 - 4	LED	Illuminates when corresponding status inputs are activated. NOTE: Counting from the top (1) down to the bottom (4).
TX	LED	Flashes during server/control processor data exchange.
RX	LED	Flashes during server/control processor data exchange.
REC	LED	Illuminated when in voice record mode.
RING	LED	Illuminated when a telco call is being received.
ACS	LED	Illuminated when a valid ACCESS code is entered.
HK	LED	Illuminated when the unit is off-HOOK.
DV	LED	Illuminated when a valid DTMF tone is detected.
ALM	LED	Illuminated when unit is in an alarm condition.
PWR	LED	Illuminated when valid power is applied to the power jack.
PGM	LED	Illuminated when the unit is in programming mode.
SS	LED	Illuminated when adequate audio is applied to the SS input, OFF when the level is to low and flashing if in an SS alarm condition, if enabled.
PF	LED	Illuminated with no power applied, OFF when adequate DC voltage is applied to the PF jack and flashing if a Power Failure has been detected, if enabled.
OP/PGM	Push Button	Toggles between operate and programming (local) mode.
SS Mon	Control	Sets the silence sensor audio sent to the phone line, when enabled.
SS Sense	Control	Sets the audio trip point of the silence sensor
PGM	Fem DB-9	RS-232 host PC programming port.
VOICE PGM	RJ11	Voice record TT phone port, user provided TT telephone

WEBSITE:

Visit our web site for product updates and additional information.

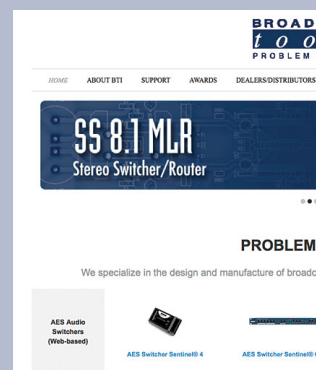

INSTALLATION

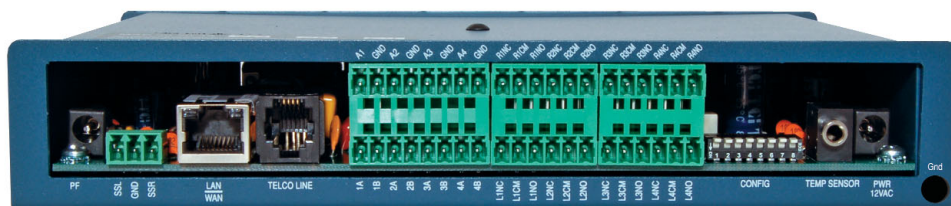

Rear panel indicators, controls and connectors

Name	Type	Description
PF	2.1mm Jack	Power Failure power jack (optically-isolated). 6 - 12 VDC.
SSL/GND/SSR	Connector	Unbalanced left/ground/right silence sensor audio input (BOT)
LAN/WAN	RJ45	Network ETHERNET port 10/100baseT, LAN/WAN
TELCO LINE	RJ11	Connects to a POTS telephone line
A1 - A4	Connector	Analog (metering) inputs one thru four (TOP)
GND	Connector	Analog (metering) ground reference terminals (TOP)
1A - 4A	Connector	Status opto-isolators. When configured for DRY (factory default) this terminal is ground. When configured for WET (floating), this terminal is the Anode via a 2.2K ohm current limiting resistor. (BOTTOM)
1B - 4B	Connector	Status opto-isolators. This terminal is always the cathode (BOTTOM)
R1NC - R4NC	Connector	Normally closed, dry relay contacts. Raise function (TOP)
R1CM - R4CM	Connector	Common (wiper), dry relay contact. Raise function (TOP)
R1NO - R4NO	Connector	Normally open, dry relay contact. Raise function (TOP)
L1NC - L4NC	Connector	Normally closed, dry relay contact. Lower function (BOTTOM)
L1CM - L4CM	Connector	Common (wiper), dry relay contact. Lower function (BOTTOM)
L1NO - L4NO	Connector	Normally open, dry relay contact. Lower function (BOTTOM)
CONFIG	Dipswitch	Used to configure the unit. Refer to table of contents.
TEMP SENSOR	3.5mm Jack	Temperature probe input jack. T/R/S.
PWR/12VAC	2.1mm Jack	System power supply input. 12 volts AC

Connecting your WVRC-4 to other equipment

Analog (metering) inputs

CAUTION! Analog input (metering) samples may be elevated several hundred volts above ground on some external equipment. Permanent damage may occur to the WVRC-4 and/or external equipment if a high voltage metering source is connected to the WVRC-4! Failure to observe this warning may also cause injury to the installer or other personnel.

CAUTION! Floating Grounds

Except for all status (wet) inputs, none of the WVRC-4's metering inputs will accept a floating ground. Damage to the WVRC-4 or your equipment may result from connecting a floating ground output to the WVRC-4. If you require metering inputs with equipment that has a floating ground, an isolation DC amplifier must be used.

Four analog (metering) channels are connected to the WVRC-4 via depluggable euro-block screw terminals. Connect the positive side of the source to the desired channel terminal labeled ANx (where x is the channel number 1 through 4) and associated GND (ground) terminal. Each analog (metering) input can handle up to (positive only) 10 volts DC and must be ground referenced. Connect your metering ground to the associated ground terminal. Inputs are self-calibrating and are based on an internal A/D converter with a precision, low-drift voltage reference, so the reading should not drift over time or with temperature. Analog (metering) setup is performed by connecting the sample voltage to the analog (metering) input, then programming the WVRC-4 for the desired value (reading).




CAUTION!

DO NOT CONNECT SAMPLE VOLTAGES IN EXCESS OF POSITIVE 10 VDC OR DAMAGE MAY OCCUR TO YOUR WVRC-4.

WEBSITE:

Visit our web site for product updates and additional information.

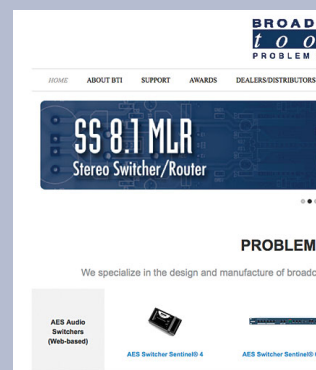

Status Inputs

Each of the four optically isolated status inputs can be configured to accept either a contact closure (dry = default) or a (floating, wet). Attach your dry contacts to the desired status channels StxA and STxB (where x is the status input) terminals.

Each input is equipped with a four-position header. Each input is labeled IN-x (where x is the status input) and the header pins are labeled 1,2,3,4. The factory default is a DRY input (switch, relay contact) with jumpers between 1 & 2 and 3 & 4. In the dry configuration, the “A” terminal is ground while the “B” terminal is the cathode of the opto diode (pulled up to 5 volts through a 2.2K resistor).

To change the status input to (floating) WET (user supplied voltage between 5 and 24vdc), remove both jumpers and place ONE jumper over pins 2 & 3. Connect the positive voltage to terminal “A” (anode) and ground or minus voltage to terminal “B”(cathode). ! NOTE: Please observe proper polarity.

Raise/Lower Relays

Raise and lower relays K1 through K4 are supplied with SPDT dry contacts. Equipment to be controlled by the RAISE relays should be connected to the TOP terminals labeled RxNC, RxCM and RxNO (where x is the channel number), while equipment to be controlled by the LOWER relays should be connected to the BOTTOM terminals labeled LxNC, LxCM and LxNO (where x is the channel number).

NOTE: If mechanical latching relays are required, we suggest the Broadcast Tools LR-5 (4PDT & 1SPST) mechanical latching relay.

Power Failure Input

Connect a user supplied 6 to 12 volts DC only power source (center positive) to the power failure input labeled PF. The barrel connector size is 2.1mm ID x 5.5mm OD. An inexpensive 6 to 12 volts DC wall transformer of any current of 50 ma or more will work.

NOTE: The primary (120vac) of the wall transformer should be connected to the utility company side of your service. An UPS is suggested to power the WVRC-4 during power outages.

Silence Sensor Inputs

Connect your unbalanced monaural or stereo audio source to the terminals labeled SSL, GND and SSR. The level should be between -10 and +8 dbu. The input impedance is approximately 10K ohms. When the SS is activated, you can adjust the SS Sense trimmer for an illuminated front panel SS led. If the SS led is out, the signal is low and if it's flashing, it is in an alarm condition (if enabled). The silence sensor signal can only be aurally monitored in dial-up mode. The front panel SS Mon trimmer should be adjusted for a comfortable level at the caller end.

CAUTION! If the SS MON level is too high, the unit may have trouble detecting DTMF tones. **NOTE:** The DTMF guard time jumper is factory set to the “MED” position for enhanced tone detection. In some applications, you may need to move this jumper.

TEMP Sensor Probe Input

Insert the temperature probes (25 foot cable) mini (3.5mm) plug in to the rear panel jack labeled “TEMP” (-40°F to +190°F (-40°C to +85°C)).

NOTE: Please limit the total length of cable to 50 feet. Please contact the factory for the proper extension cable. The temperature probe should only be installed or removed with the power supply disconnected from the WVRC-4.

POTS Telephone Line RJ11

Connect one end of the supplied RJ11 modular cable to the rear panel RJ11 jack labeled “LINE” and the other end to the telephone line.

NOTE: Some “cell phone services” severely distort DTMF control tones resulting in unreliable control. If you plan on using the cellular system for your POTS connection, you may have to experiment with various service providers to get reliable control. With some cellular phone services, you may need to change the DTMF guard time jumper to the “FAST” position. We recommend using a product from Telular “Phonecell® SX5D or SX7” which is designed for the GSM system (www.telular.com/).

PGM, RJ11, TT phone

Connect the modular cord of the user supplied TT telephone to the front panel RJ11 jack labeled “PGM”

PGM, RS-232 female DB-9 connector

Connect one end of the supplied male/female straight-thru serial cable to this connector and the female end to a user provided PC (this may not be needed if the user elects to program the dial-up portion via telnet (INTERNET)).

NETWORK connector


Connect one end of the supplied CAT5 (straight or xover) cable to desired ETHER-NET port.

POWER connector (12VAC)

Connect the supplied 12VAC power supply cord in to the WVRC-4’s power jack labeled “12 VAC @ 1 amp”, then plug the transformer in to a source of 120vac 60Hz. Verify that the front panel green power led is illuminated.

WEBSITE:

Visit our web site for product updates and additional information.

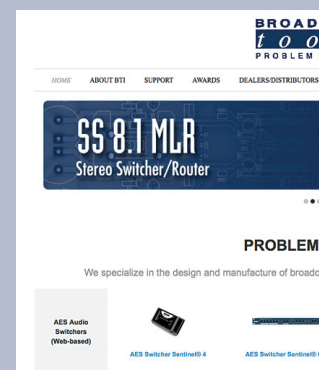

Dial-Up Programming

Connect the supplied 12VAC power supply cord in to the WVRC-4's power jack labeled "12VAC 1 AMP", then plug the transformer in to a source of 120 vac 60Hz. Verify that the green "PWR" led is illuminated.

Follow the steps below to configure the WVRC-4 for dial-up operation:

Installing factory (Dial-up only) defaults.

Remove power from the unit. Hold down the "PGM" button down while reinstalling the power plug. The "PGM" button must be held down for a few seconds after the power is restored. When the PGM button is released, the PGM LED will blink twice to show that the defaults were loaded.

CAUTION! If you reinstall factory defaults, the standard factory recorded voice prompts are not reloaded. The user MUST re-record the voice prompts.

NOTE: The dial-up programming may be accomplished locally using the RS-232 serial port or via the web using Telnet.

Telnet "DIAL-UP" programming via LAN/WAN.

NOTE: Step by step HyperTerminal "Telnet" setup instructions are available on-line at www.broadcasttools.com under "Downloads"

If you have followed the above HyperTerminal "Telnet" steps, the main WVRC-4 menu will be displayed on the next page.

Local "DIAL-UP" programming via the front panel RS-232 "PGM" port.


1 - Connect the supplied straight-through serial cable to an available com port on your PC (If the PC isn't equipped with a serial (com) port, contact your local PC store or Broadcast Tools for a USB to RS-232 serial adapter) and connect the other end to the front panel "PGM" DB-9 female serial connector.

2 - Start HyperTerminal (or your favorite com program) configured for: 9600,8,N,1, flow control to NONE, Emulation set to ANSI and under ASCII setup, check the box "echo typed characters locally".

NOTE: Step by step "COM" port HyperTerminal setup instructions are available on-line at www.broadcasttools.com under "Downloads".

3 - Press the front panel “PGM” button. The front panel “PGM” LED will illuminate, while the program menu on the next page will be displayed:

Program Menu:

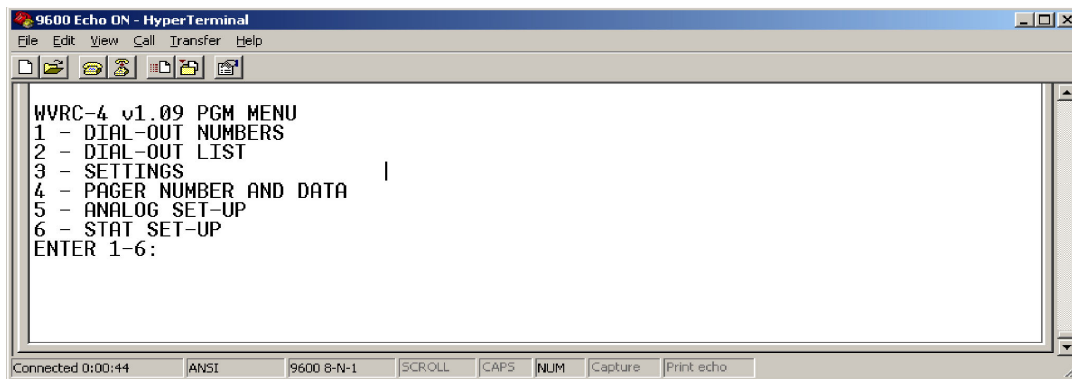


```
9600 Echo ON - HyperTerminal
File Edit View Call Transfer Help
WVRC-4 v1.09 PGM MENU
1 - DIAL-OUT NUMBERS
2 - DIAL-OUT LIST
3 - SETTINGS
4 - PAGER NUMBER AND DATA
5 - ANALOG SET-UP
6 - STAT SET-UP
ENTER 1-6:
Connected 0:00:44 ANSI 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Menu navigation:

Press escape (ESC) to jump back to the previous menu selection, and if pressed from the PGM Menu, program mode will be exited.

Dial Out Numbers


These are the numbers that will be dialed when alarms are generated. The dial-out list will select numbers from this pool to call out during an alarm condition. Up to 32 digits can be used in each number along with a comma (,) for one second and a semi-colon (;) for 5 second pauses. When (1) is selected from the PGM Menu, the Dial-Out number list will be displayed.

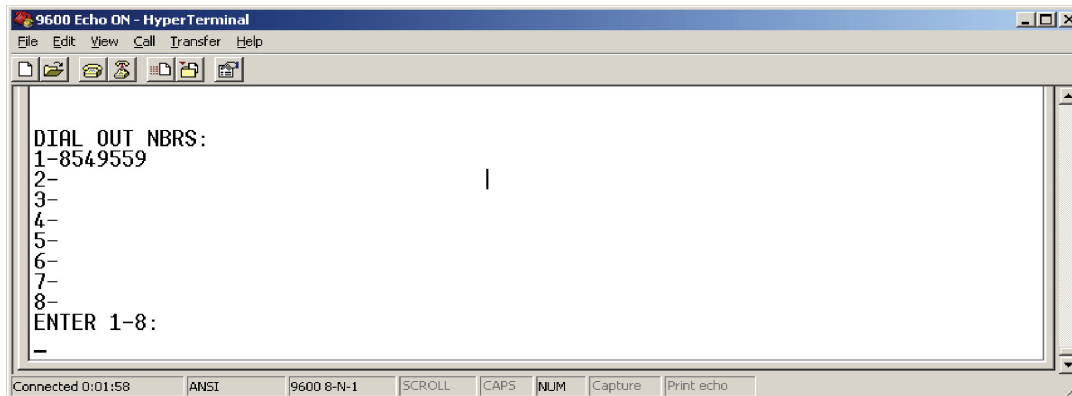

```
9600 Echo ON - HyperTerminal
File Edit View Call Transfer Help
DIAL OUT NBRS:
1-8549559
2-
3-
4-
5-
6-
7-
8-
ENTER 1-8:
Connected 0:01:58 ANSI 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
```

WEBSITE:

Visit our web site for product updates and additional information.

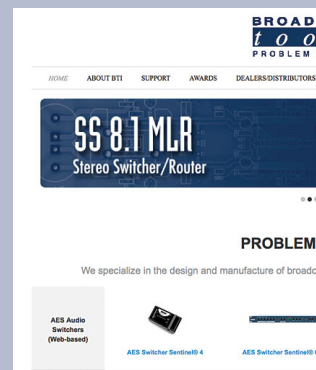

Dial-Out List

When (2) is selected from the PGM Menu, the Dial-Out List is displayed. This is where you determine what number is dialed for a selected input alarm. 1 - 4 is used for status inputs, A-D are used for Analog (metering) inputs, S for Silence Sensor, P for Power Fail and T for Temperature. The numbers after the Analog letter selection show which analog channel is being selected. Only enter the letter designation to select the analog dial-out list to program.

Example: When status input 1 changes state, the WVRC-4 will dial the number stored in the dial out number location 1.

```

9600 Echo ON - HyperTerminal
File Edit View Call Transfer Help
ST DIAL LIST:
1-1
2-1
3-1
4-1
AD + PF&SS DIAL LIST:
A1-1
B2-1
C3-1
D4-1
PF-1
SS-1
TA-1
ENTER 1-4 FOR STAT, A-D FOR ANALOG, P FOR PF, S FOR SS, T FOR TEMP ALARM:
-
Connected 0:02:41 ANSI 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
    
```

Settings:

```

9600 Echo ON - HyperTerminal
File Edit View Call Transfer Help
1-ACS CODE, 2-LAP, 3-RING, 4-RPT, 5-SILENCE, 6-PF, 7-HU, 8-MTR CODE, 9-AD TIME
1-123
2-2
3-2
4-3
5-0
6-0
7-2
8-456
9-2
ENTER 1-9:
Connected 0:03:38 ANSI 9600 8-N-1 SCROLL CAPS NUM Capture Print echo
    
```


When item (3) is selected from the PGM Menu, the Access Code, Lap, Ring Count, Repeat Count, Silence Sensor Delay Time, Power Fail Time, Hang up time, Monitor access code and Analog Debounce Time can be programmed.

The “Access Code” may be changed from the default code of 123, allowing a user all control functions.

“Lap” defines the number of times the WVRC-4 will go through all of the numbers in the call-out list when calling out an alarm if it does not receive an acknowledgement.

NOTE: Alarms are acknowledged by pushing the star (*) key when an alarm is called out.

“Ring” defines the number of rings required before the WVRC-4 answers a call.

“Repeat” is the number of times the voice message will be repeated when the alarm is called out. Since there is no way of knowing when the remote party answers the phone line, the WVRC-4 will start playing the alarm message a few seconds after dialing for the “Repeat” number of times. So when an alarm call is answered, you may pick up the phone in the middle of an announcement or there may be a few seconds of silence before the start of the next message. Once the star (*) is entered to acknowledge the alarm, it will stop playing the message. You can now enter your access code and perform control functions or polling.

“Silence” Time is programmed with a value of 0-9 with a 0 being OFF and 1-9 with values are as follows: 1 = 10 sec, 2 = 30 sec, 3 = 60 sec, 4 = 1.5 min, 5 = 2.0 min, 6 = 2.5 min, 7 = 3 min, 8 = 4.0 min and 9 = 5.0 min. Note: The silence sensor audio must be restored for a minimum of 10 seconds and the alarm must be acknowledged before it is cleared.

“Power Fail” Time is programmed in 10 second values. For example, 2 = 20 seconds of silence or power failure to generate an alarm, 9 = 90 seconds. If it is set to “0”, the alarm will be turned off and will not call out.

The “HU” value refers to the number of minutes the WVRC-4 will remain off-hook after answering the call before hanging up automatically. Normally a CPC signal is sent from the Central Office to signal it to hang up. If you are connected to a standard phone line, you can set the HU to 0, and it will remain off-hook until the CPC signal is received. If it is connected on the other side of a PBX system that does not pass the CPC signal, then a value of 1-9 minutes should be set into HU to keep it from remaining off hook and causing the line to be busy. The HU timer will be reset each time a valid DTMF is decoded showing activity. Once there is no more activity, the WVRC-4 will time-out after the HU time value and force a hang-up.


The “Monitor Access Code” is an alternate access code that allows a user only to monitor or poll the various inputs. No control functions can be performed unless a valid Control Access code has been entered.

The “Analog (metering) Debounce Timer” is the number of ten second increments required for the analog inputs to accept an alarm condition. For example, if it is set to 3, an Analog input must be in an alarm condition for 30 seconds before an alarm will be generated.

NOTE: If set to “0”, analog alarms will be disabled and will not call out during an alarm.


WEBSITE:

Visit our web site for product updates and additional information.

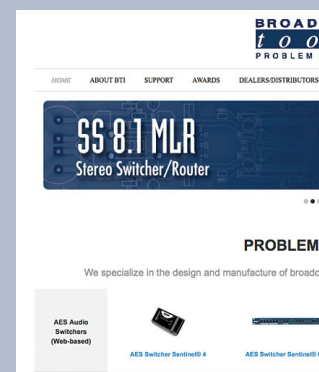

PROGRAMMING


Pager Numbers and Data Strings

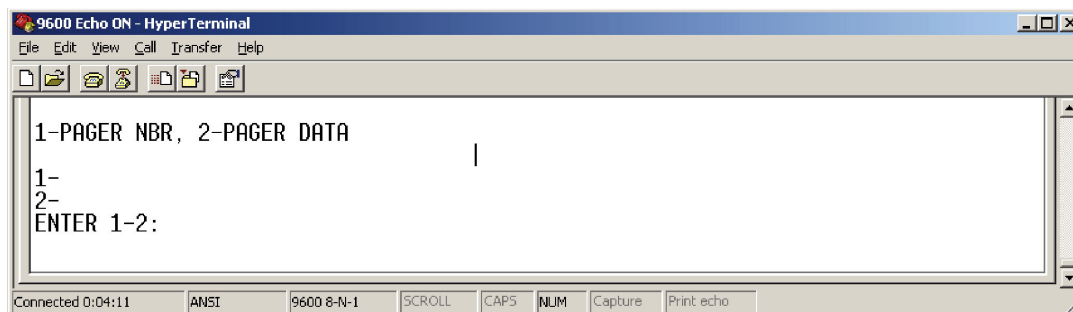


When item 4 is selected from the PGM Menu, the pager number and pager data can be entered. To force the WVRC-4 to dial a pager number, enter a “9” in the dial-list. That will cause the WVRC-4 to first dial the number in the page list, then it will generate two digits to identify the source of the alarm; 11-14 for analog (metering inputs one through four, 19 for a temperature alarm, 20 for a power failure, 21-24 for status inputs one through four and 29 for a silence sensor alarm. The last item to be sent is the pager data. This can be used to identify the station or location of the WVRC-4. The comma (,) can be used any place in the dialing strings to place a one second pause and the semi-colon (;) for a five second pause.

Analog (metering) Setup

When “5” is selected from the PGM Menu, the analog (metering) calibration and Alarm Set Points can be configured.

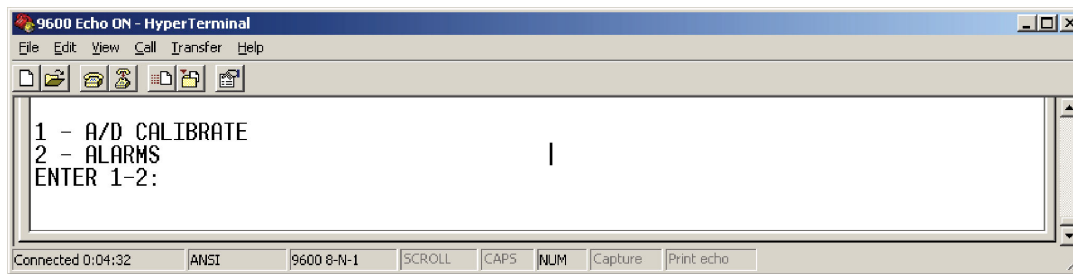

Select “1” to calibrate any of the analog (metering) inputs for the desired value. Selecting a “1” will produce the following prompt “Select Ch 1-4 followed by the desired 4 digit value”. Enter the channel number, then the desired value.

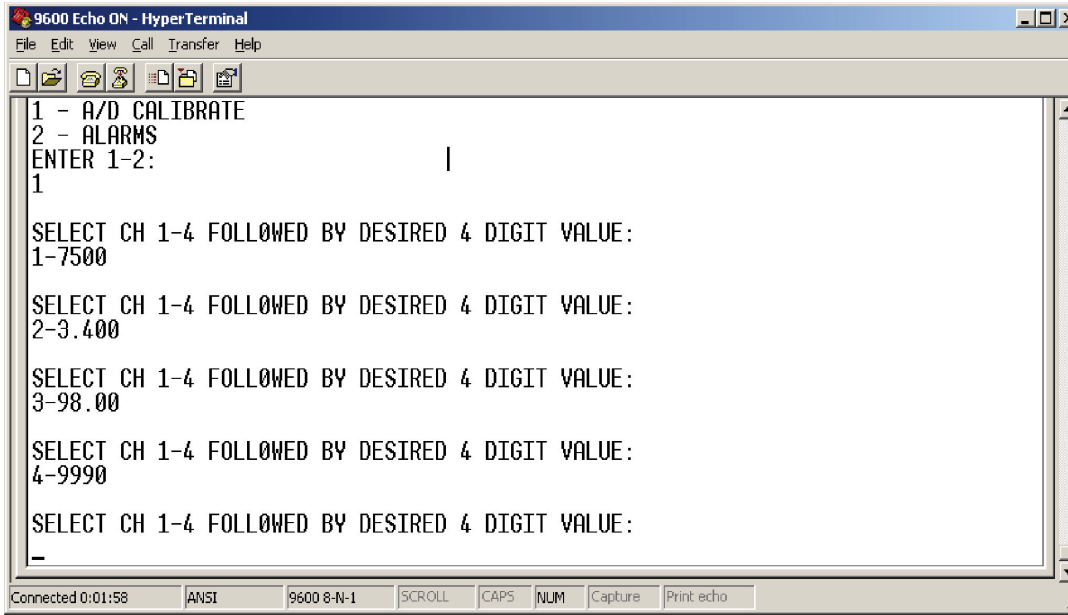

NOTE: The decimal point may be added and is not considered part of the four digits

Example: To calibrate analog (metering) channel 1, enter 1, then the desired four-digit reading.

Example: 75.00 would be seventy-five; 750.0, seven hundred and fifty while 7500 would be seventy five hundred.


NOTE: The correct value on the analog (metering) input **MUST** be present for several seconds prior to entering OP/PGM mode. Once program mode is entered, the analog (metering) inputs are locked and changes made while in program mode will not be read. If there is no signal on the input, an error message will be displayed.

Enter a “2” from the Analog Set-Up menu to establish alarm set points. Analog (metering) input set points are set up using items 1 à 4, representing analog (metering) inputs one through four.

Example: If you’re reading is normally 7000 V, and you want it to alarm when the voltage drops below 6300 (-10%) or over 7350 (+ 5%), then enter 6300/7350.


WEBSITE:

Visit our web site for product updates and additional information.

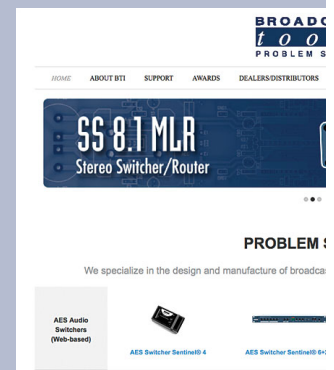

Temperature alarm set points are set up in the analog (metering) “Alarms” menu section. Item “9” sets the low and high set points. The entry is a four-digit number with the first digit being the F or C designator. If the first digit is a “0” then the number is assumed to be Fahrenheit. If the first digit is a “1” then Celsius is assumed.

Example: To enter low and high alarm set points of 30F and 95F, enter 0030/0095. To enter low and high alarm set points of 10C and 40C enter 1010/1040. **Do not enter the “/”, it will be entered automatically.**

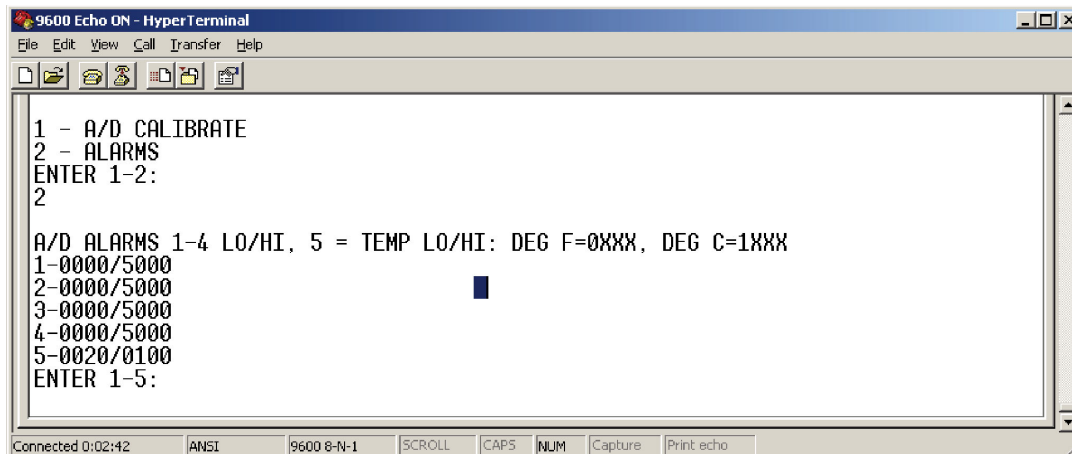

```
9600 Echo ON - HyperTerminal
File Edit View Call Transfer Help


1 - A/D CALIBRATE
2 - ALARMS
ENTER 1-2:
2

A/D ALARMS 1-4 LO/HI, 5 = TEMP LO/HI: DEG F=0XXX, DEG C=1XXX
1-0000/5000
2-0000/5000
3-0000/5000
4-0000/5000
5-0020/0100
ENTER 1-5:

Connected 0:02:42  ANSI  9600 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Status Setup

When “6” is selected from the PGM Menu, the Status inputs are set up for either Normally Open or Normally Closed and for the amount of DEBounce time the input has to be in an “alarm” state for an alarm to be generated.

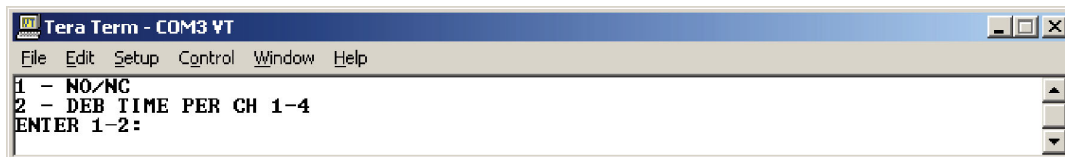

```
Tera Term - COM3 VT
File Edit Setup Control Window Help

1 - NO/NC
2 - DEB TIME PER CH 1-4
ENTER 1-2:
```


When “1” is selected from the menu: Make changes or press Escape to accept current values. If changes are made, all four values must be entered.



```
Tera Term - COM3 VT
File Edit Setup Control Window Help

CURRENT SETTINGS, 0=NO, 1=NC:
0000
ENTER 0 FOR NO, 1 FOR NC CH 1-4:
```

When “2” is selected from the menu, the following is displayed:

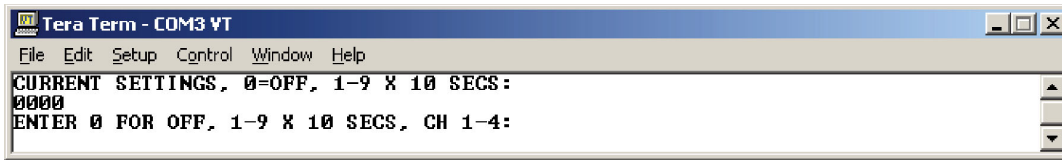

Make changes or press ESC to accept current values. If changes are made, all four values must be entered. Valid settings are 0 through 9. A “0” will turn off the status input so that it will not generate an alarm. A 1-9 will set the “DEBounce” period from 10 to 90 seconds. That means that the input must be in the alarm state continuously for that amount of time for an alarm to be generated. Any interruption will cause the timer to reset.

Recording Voice Prompts (Messages):

To record voice messages into the WVRC-4, follow the steps below:


- 1 - Connect a TT telephone to the front panel RJ-11 jack.
- 2 - Press the front panel “OP/PGM” button; this should illuminate the front panel “PGM” LED.
- 3 - Enter the two-digit address of the message you wish to program. The list of messages are below.
- 4 - The Red “REC” LED will illuminate. As soon as it lights, begin speaking the new message into the telephones mouth piece. For best results, stay at least three inches from the mouthpiece of the telephone.
- 5 - When finished, press the “OP/PGM” button again, the “REC” and “PGM” LED’s will extinguish.

NOTE: If the time allotted for the message you are recording elapses before the button is pressed, it will turn off automatically. For example, to record the greeting message, press the “OP/PGM” button, enter 00 on the keypad, speak the new greeting message into the handset and press the “OP/PGM” button again.

Example: To hear the current greeting message, press the “OP/PGM” Program button and enter *00. The current greeting message will play.

WEBSITE:

Visit our web site for product updates and additional information.

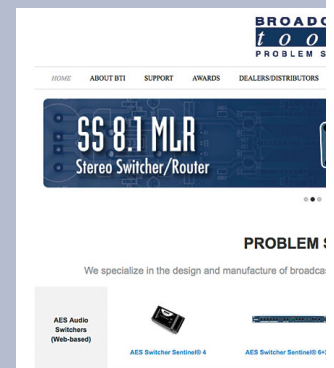

Here is a list of the voice messages that are included with the WVRC-4.

Message	Address	Length (Sec)
Greeting	00	10
On	01	2.6
Off	02	2.6
Raise	03	2.6
Lower	04	2.6
Access Accepted	05	5
Silence Alarm	06	5
Power Fail Alarm	07	5
High	08	5
Low	09	5
Status Input 1	11	5
Status Input 2	12	5
Status Input 3	13	5
Status Input 4	14	5
Status Input 5	15	5
Status Input 6	16	5
Status Input 7	17	5
Status Input 8	18	5
Analog Input 1	21	5
Analog Input 2	22	5
Analog Input 3	23	5
Analog Input 4	24	5
Analog Input 5	25	5
Analog Input 6	26	5
Analog Input 7	27	5
Analog input 8	28	5
Engineering Unit 1	31	2.6
Engineering Unit 2	32	2.6
Engineering Unit 3	33	2.6
Engineering Unit 4	34	2.6
Engineering Unit 5	35	2.6
Engineering Unit 6	36	2.6
Engineering Unit 7	37	2.6
Engineering Unit 8	38	2.6
Number 0	40	2.6
Number 1	41	2.6
Number 2	42	2.6
Number 3	43	2.6
Number 4	44	2.6
Number 5	45	2.6
Number 6	46	2.6
Number 7	47	2.6
Number 8	48	2.6
Number 9	49	2.6

Message	Address	Length (Sec)
Relay 1	51	5
Relay 2	52	5
Relay 3	53	5
Relay 4	54	5
Relay 5	55	5
Relay 6	56	5
Relay 7	57	5
Relay 8	58	5
Temperature	60	2.6
Degrees Celsius	61	2.6
Degrees Fahrenheit	62	2.6
Minus	63	2.6
Enabled	64	2.6
Disabled	65	2.6
Point	66	2.6
Temperature Alarm	67	2.6

“CONFIGURE” DIP Switch settings:

NOTE: The “UP” position is OFF

DIP 1 - Feature creep

DIP 2 - OFF = Voice Temperature in Fahrenheit, ON = Celsius.

DIP 3 - If OFF, description messages will be played when controlled via dial-up. If ON, raise and lower description messages will not be played.

DIP 4 - OFF = Server control, ON = PC control via DB9.

DIP 5 - OFF = Normal operation, ON = DB9 RS-232 to web server.


DIP 6 - Feature creep

DIP 7 - Feature creep

DIP 8 - If OFF, input alarms are active. If ON, alarms will not respond.

WEBSITE:

Visit our web site for product updates and additional information.

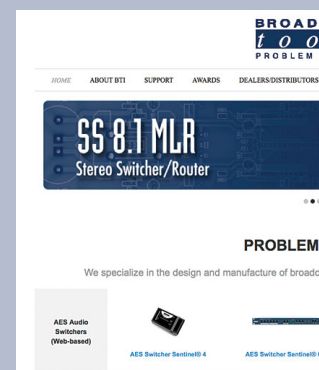

When the WVRC-4 is called, it will answer on the number of rings programmed. When it answers, enter the default security code 123 for this example. The access LED will illuminate once a valid security code is entered, and the “Access Accepted” Message will play. After a valid access code is received, the addressed unit will generate a DTMF “AB” which will cause any other units in parallel to hang up.

NOTE: Multiple WVRC-4's may be daisy-chained to allow for channel expansion. Use an unique access code for each additional WVRC-4.

Raise and Lower Relays are controlled with single digits 1-4 followed by * for Lower or # for Raise. Once a single channel number has been entered, you can now enter * or # to operate that channel until a new channel number has been entered. The analog value for the selected channel will play each time a number between 1 and 4 is entered as long as DIP3 is OFF.

Example: Enter 1 – analog value 1 will play - * - The number 1 Lower relay will be held on as long as “*” received, # - Raise relay held on as long as “#” received. If DIP3 is OFF, the associated relay message plus “raise” or “lower” will be played after the * or # is released. To find out the new analog values just press 1 again and it will speak the new value.

Audio I/O functions are controlled with the following codes, once the security code has been entered:

07 – Silence sensor monitor audio to telco ON

08 – Silence sensor monitor audio to telco OFF

NOTE: The silent sensor audio will be turned off when the WVRC-4 hangs up.

The Status inputs, Analog (metering) inputs, silence sensor and power fail inputs can be polled.

Polling Silence Sensor Alarm: 910

Polling Status inputs: 911 - polls status input 1, 912 - polls status input 2 914 polls input 4.

NOTE: When polling status inputs, the actual alarm state is returned, regardless of the input being high or low. So if the input is set as Normally Closed, and it is Open when polled, it will say “Input x is “ON”.

Polling Power Failure: 919

Manual Hang-up: 920 will cause the WVRC-4 to hang up.

Polling Analog (metering) inputs:

921 - polls analog input 1, 922 - polls analog input 2 924 polls analog input 4.

Polling temperature: 929

DTMF Control of Alarm Enable Registers

All of the Alarm call-outs can be enabled disabled or polled remotely using DTMF control. First enter the access code. Once the unit is un-locked, the status alarms can be controlled by entering 77 followed by the status number 1 through 4 and 1 for enable, 0 of disable or 9 for poll. The analog alarms can be controlled by entering 78 followed by the analog number 1 through 4, and 1 for enable, 0 for disable or 9 for poll. Power fail and silent sensor are controlled with 79 followed by 1 for power fail, 2 for silent sensor, then 1 for on, 0 for off or 9 for poll.

NOTE: To clear an alarm, press the star (*) key.

Examples are listed below:

Enable Status 4 alarm:	7741.	Disable Status 4 alarm:	7740
Poll Status 4 alarm enable:	7749		
Enable Analog 1 alarm:	7811.	Disable Analog 5 alarm:	7810
Poll Analog 1 alarm enable:	7819		
Enable Power Fail Alarm:	7911.	Disable Power Fail alarm:	7910
Poll Power Fail alarm enable:	7919		
Enable Silent Sensor Alarm:	7921.	Disable Silent Sensor Alarm:	7920
Poll Silent Sensor Alarm enable:	7929		

NOTE: To clear an alarm, press the star (*) key.

A voice message will be played indicating the action taken.


Web and/or Dial-up Notice

The WVRC-4 can be used for dial-up only, web only or a combination of both. It is suggested that the user configure for both dial-up and WEB operation. Some features such as the scheduler and logger will require the user to configure the web portion of the WVRC-4 even if web access isn't being used.

NOTE: If the scheduler is to be used for time sensitive applications, the use of a NTP server for time is highly recommended.

WEBSITE:

Visit our web site for product updates and additional information.

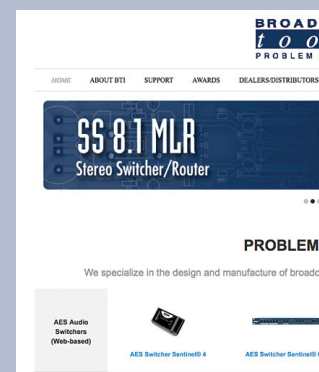

WEB Setup

The WVRC-4 firmware supports an HTTP (web) interface on TCP port 80, which is user programmable. The default page contains a Java applet used to monitor and control the WVRC-4.

Ethernet setup

The WVRC-4 is factory set for IP: 192.168.1.55
Subnet: 255.255.255.0

CAUTION! Assigning an IP address already in use by another device may cause problems with your network!

Information you'll need to configure the WVRC-4

1 - An available Static IP address to assign to the WVRC-4.

The WVRC-4 is factory set for IP: 192.168.1.55
Subnet: 255.255.255.0

NOTE: If a static IP isn't available, consider using <http://www.dynip.com/>

2 - The network's subnet mask.

3 - Your network's gateway address (essential for proper operation).

4 - The IP address of the email server.

5 - The SMTP port used by your email server (usually 25).

6 - Up to four email addresses to which you want to send alarms.

NOTE: The network administrator may be required to enter the IP address of the WVRC-4 into the SMTP server to allow email forwarding. In some installation, an email forwarding service such as <http://www.smtp.com/> may be required for the email function to operate properly.

7 - IP address of a NTP timeserver, if used.

NOTE: Here is the IP address for the NIST NTP server **132.163.4.103**

(<http://tf.nist.gov/service/time-servers.html>). (You may also enter the time and date manually if Internet service is not available). The RTC isn't battery backed-up. You should consider a UPS to maintain time/date.

The WVRC-4's RJ-45 (Network) is normally attached to a DSL/Cable router, Ethernet hub or switch. The supplied "Device Installer" software should be used to configure the IP address of your WVRC-4. The "Device Installer" version 4.1.0.12 software or greater is also available on our web site: www.broadcasttools.com, under downloads or on the supplied CD.

NOTE: The Device Installer application requires Microsoft's .NET Framework version 1.1 or greater. If you do not already have .NET Framework version 1.1 or greater (dotnetfx.exe) installed, you can download it from the link: [v1.1](#)

1 - Install the "Device Installer" software on the PC used for the WVRC-4 setup.

NOTE: The WVRC-4 applet requires a compatible Java Runtime Environment Version 6 update 1 or greater. If your browser is lacking Version 6 update 1 or greater, we have provided a link to download the required application: <http://www.java.com/en/download/index.jsp> then click on the "Download Now" button, then follow the prompts.

2 - Connect the supplied BLUE straight-through CAT 5 cable to the RJ-45 connector on the WVRC-4 labeled (Network) and the other end to your hub or switch.

NOTE: If you are attaching the WVRC-4 directly to your computer, you MUST use the supplied GRAY Xover CAT 5 cable and set your PC's IP for 192.168.1.1

3 - Connect the supplied 12 VAC @ 1amp power supply to the WVRC-4's power jack labeled 12VAC/1 Amp. Verify that the front panel power LED and left "LINK" LED above the "NETWORK" RJ-45 are illuminated

Ethernet port LED indicator functions

Link LED Left Side	
Color	Meaning
Off	No Link
Amber	10 Mbps
Green	100 Mbps

Activity LED Right Side	
Color	Meaning
Off	No Activity
Amber	Half Duplex
Green	Full Duplex

4 - Start the “Device Installer” software.

a - Click on “SEARCH”

b - When the WVRC-4 is found, click on the listed device. If more than one WVRC-4 is found, refer to the MAC address label attached to the WVRC-4 RJ-45 case and click on the desired WVRC-4, which should be highlighted.

NOTE: The cover must be removed to locate the MAC address label, or check the “MAC” label attached to the top of chassis.

c - Click on the “ASSIGN IP” button, then follow the instructions for setting a static IP address, along with the subnet and gateway, if applicable.

d - After the WVRC-4 has rebooted, click the “SEARCH” button, the configured WVRC-4 should be listed.

NOTE: You may have to click the search button more than once after the reboot.

NOTE: You can also open your browser and type in the assigned IP address in the “ADDRESS” area of your browser. Example: 192.168.1.101

5 - If you are behind a firewall or router, you will need to port forward not only port 80, also open ports 3001 and 3002 and set the SUN Java to direct.

NOTE: To set up port forwarding, refer to the manual supplied with the firewall or router.

6 - To change the WVRC-4 from port 80, contact the factory

7 - To access the WVRC-4, open your browser and type in the assigned IP address in the “ADDRESS” area of your browser. Example: 192.168.1.55

8 - If things are working correctly, you should see the WVRC-4 web page.

NOTE: On some machines and browsers, this may take a few seconds.


9 - Log in using the default user name = wvrc4 or admin (lower case) and the password = wvrc4 (lower case) or 1234.

NOTE: If you change the “OWNER” user name and password, be sure to write it down.

10 – Follow the descriptions on the following pages to set up the WVRC-4.

WEBSITE:

Visit our web site for product updates and additional information.

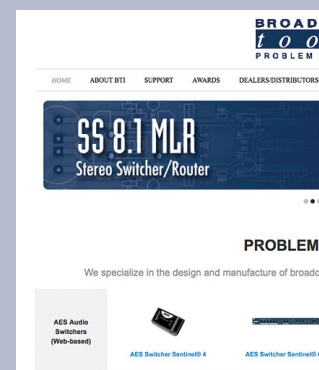

WEB SETUP

The WVRC-4 software consists of two components – firmware running in the XPORT web server and a Java applet hosted on the XPORT, running in a web browser. The following describes the operation of both components.

CAUTION! NEVER DOWNLOAD FIRMWARE UPDATES OR CHANGES TO THE XPORT WEBSERVER. DOING SO DELETES ALL SOFTWARE AND VOIDS ALL WARRANTIES FROM BROADCAST TOOLS, INC.

Firmware

The WVRC-4 firmware starts when the Xport is booted. The firmware communicates with the WVRC-4 microcontroller via its internal serial port and provides several network interfaces via its Ethernet port.

The WVRC-4 firmware supports an HTTP (web) interface on TCP port 80. The default page (index.html) contains a Java applet used to monitor and control the WVRC-4. The applet is fully described in the next section.


CAUTION! NEVER DOWNLOAD FIRMWARE UPDATES OR CHANGES TO THE XPORT WEBSERVER UNLESS REQUESTED BY BROADCAST TOOLS. DOING SO DELETES ALL SOFTWARE AND VOIDS ALL WARRANTIES FROM BROADCAST TOOLS, INC.

Java applet

The Java applet is the primary user interface. The following pages describe each of the items of each screen displayed by the applet:

WEBSITE:

Visit our web site for product updates and additional information.

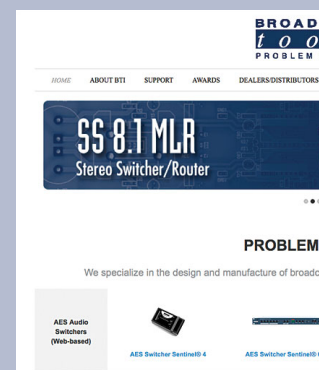

Main Screen

The main screen displays information identifying the site, gauges and LED's representing analog (telemetry) values, status state, buttons representing relays and buttons to login, set up, and control the WVRC-4.

Site ID	User defined identification
Station Call Letters	Call letter identification
Current Time	Current time set in the WVRC-4
Enable Audible Alarms	Specifies whether alarms cause a beeping noise or are silent
Analog Labels	User defined labels for analog inputs
Analog Display	Graphical representation of the defined analog metering values
Analog Text	Numeric representation of the defined analog values
Analog Unit Labels	User defined labels giving analog units of measure
Status Labels	User defined labels for status inputs
Status LED's	On/Off indicators showing current state of status inputs
Relay Button Labels	User defined labels for relays
Relay Buttons	Buttons to momentarily activate or latch relays
Virtual Labels	User defined labels for virtual values
Virtual Displays	Graphical representation of current virtual values
Virtual Text	Numeric representation of current virtual values
Virtual Unit Labels	User defined labels giving virtual units of measure
Login Button	Displays the Login dialog described below
Logout	Logs the user out
User Setup	Displays the User Setup dialog described below

System Setup	Displays the System Setup dialog described below
Network Setup	Displays the Network Setup dialog described below
Schedule Setup	Displays the Schedule Setup dialog described below
Analog Setup	Displays the Analog Setup dialog described below
Status/Relay Setup	Displays the Status/Relay Setup dialog described below
Virtual Setup	Displays the Virtual Setup dialog described below
Silence Alarms	Sends the Silence (clear) Alarms command to the WVRC-4
Show Log	Displays the event log as a text file in the browser (IP/log.txt). Be sure
to allow pop-ups	
User Defined Button	Displays a user-defined label and activates a user-defined URL when clicked (Example: URL of site camera, etc)
About	Displays the About dialog described below

Login Dialog


The Login dialog asks the user for a username and password. This information is used to determine the user's privilege level and the commands the user can execute.

Default Username	wvrc4 or admin (lower case)
Default Password	wvrc4 (lower case) or 1234

User Setup Dialog

WEBSITE:

Visit our web site for product updates and additional information.

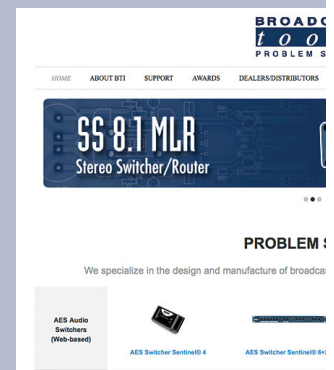


The User Setup dialog is used to assign passwords and privilege levels for up to eight users. Privilege levels allow the following activities:

- None - Monitor analog, status, and virtual inputs
- User - Monitor analog, status, and virtual inputs, activate relays
- Super - Monitor analog, status, and virtual inputs, activate relays, perform setup functions excluding User Setup
- Owner - Monitor analog, status, and virtual inputs, activate relays, perform setup functions including User Setup

Username	Specifies a 15-character, case-sensitive username.
Password	Specifies a 15-character, case-sensitive password.
Buttons	Selects a privilege level.
OK	Saves the settings and exits.
Cancel	Exits without saving settings.

Default Username wvrc4 or admin (lower case)
Default Password wvrc4 (lower case) or 1234

System Setup Dialog

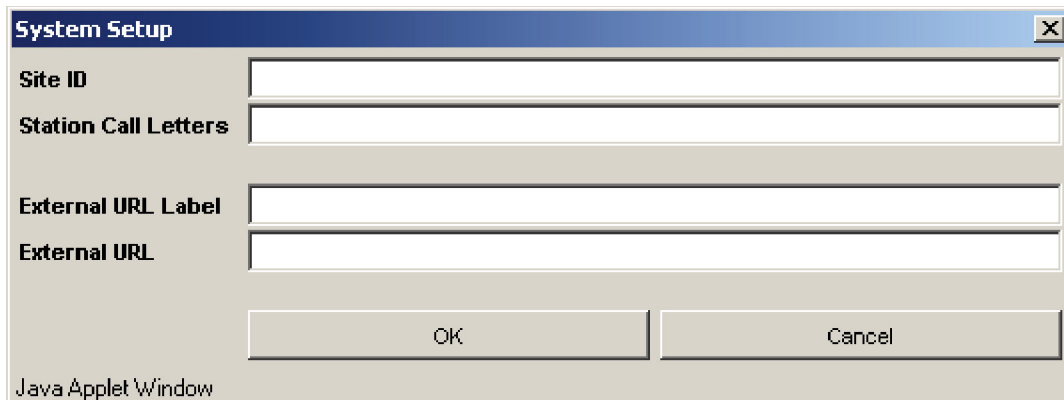

The Unit Setup dialog allows the user to set up the following operating characteristics of the WVRC-4 firmware and applet.

Site ID	Changes the site ID displayed on the main page.
Station Call Letters	Changes the station call letters displayed on the main page.
External URL Label	Changes the label displayed on the user-defined button.
External URL	Defines the URL that is activated when the user-defined button is clicked.
OK	Saves the information and exits.
NOTE: After changing labels and values, it is necessary to restart the applet (refresh the browser) to make these items appear.	
Cancel	Exits without saving values.



Broadcast Tools
products, as any electronic device, can fail
...




For safety, DO NOT connect ...



Helpful tips area.

WEBSITE:

Visit our web site for product updates and additional information.

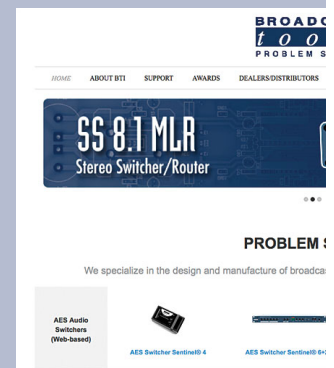

WEB SETUP

Network Setup Dialog

Network Setup

SMTP Server Address: email_server.com

SMTP Port: 2525

Return Address: myemail@remoteguy.com

Host ID: Anything

Recipient Addresses:

- recipient1@coolwebsite.com
- recipient2@greatwebsite.com
- recipient3@superwebsite.com
- recipient4@excellentwebsite.com

Backup DNS Server IP Address: 0.0.0.0

NTP Server Address: pool.ntp.org

NTP Port: 123

NTP Update Interval (Minutes): 60

NTP Enabled: ☒

Time Zone Offset From UTC: -7.0 hours

Current date/time YYYYMMDDHHMMSS (optional):

Test E-mail OK Cancel

Java Applet Window

The Network Setup dialog allows the user to set up the following operating characteristics of the WVRC-4 firmware and applet.

SMTP Server Addr	Outbound e-mail server IP address.
SMTP Port	Outbound e-mail port, usually 25 but may be redefined by server administrator.
Return Address	Return e-mail address for alerts sent from the WVRC-4
Host ID	Optional, in the form of: host.domain.
Recipient Addresses	E-mail addresses (four) of alert recipients.
Backup DNS Server	IP address of DNS server to use when DHCP is not used to acquire an IP address for the WVRC-4, or if the DNS server address is not provided in the DHCP response.
NTP Server Address	Time server address.
NTP Port	Time server port, usually 123.
NTP update Interval	Specifies how frequently the WVRC-4 acquires time. More frequent updates ensure more precise time.
NTP Enabled	Checked if an NTP server is used, unchecked otherwise.
Time Zone Offset	NTP time must be adjusted to account for time zones. This item lets the user specify the appropriate offset for his/her location from UTC time.
OK	Saves the information and exits.
Test E-mail	Saves settings and sends a test e-mail to each recipient.
Cancel	Exits without saving values.

Schedule Setup Dialog

ID	Schedule Type	Month	Day	Time	Action	Item
1	Unused	All	All	00:00:00	Lower	
2	Unused	All	All	00:00:00	Lower	
3	Unused	All	All	00:00:00	Lower	
4	Unused	All	All	00:00:00	Lower	
5	Unused	All	All	00:00:00	Lower	
6	Unused	All	All	00:00:00	Lower	
7	Unused	All	All	00:00:00	Lower	
8	Unused	All	All	00:00:00	Lower	
9	Unused	All	All	00:00:00	Lower	
10	Unused	All	All	00:00:00	Lower	
11	Unused	All	All	00:00:00	Lower	
12	Unused	All	All	00:00:00	Lower	
13	Unused	All	All	00:00:00	Lower	
14	Unused	All	All	00:00:00	Lower	
15	Unused	All	All	00:00:00	Lower	
16	Unused	All	All	00:00:00	Lower	
17	Unused	All	All	00:00:00	Lower	
18	Unused	All	All	00:00:00	Lower	
19	Unused	All	All	00:00:00	Lower	
20	Unused	All	All	00:00:00	Lower	
21	Unused	All	All	00:00:00	Lower	

Java Applet Window

Raise, lower relays and alarm enable/disable can be activated on a scheduled basis. Up to 100 scheduled events can be defined. These can be one-time or repeating events. The Schedule Setup Dialog displays a list of scheduled events and allows the user to edit the schedule event's details, described under Schedule Detail Dialog below.


- Edit** Opens the Schedule Detail Dialog for the selected event. The user can also double-click the event to open the detail dialog.
- Delete** Delete the selected event.
- Close** Close the Schedule Setup Dialog.

Schedule Detail Dialog

Java Applet Window

WEBSITE:

Visit our web site for product updates and additional information.

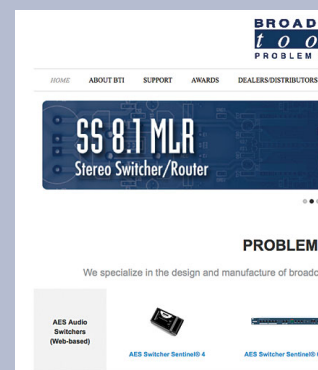

The Schedule Detail Dialog is used to set up a single schedule event. An event specifies an action (raise or lower), a relay or alarm muting/unmuting, and a time when the action occurs. The scheduler supports both day-of-month and day-of-week schedules. Wildcards can be specified in any of the date/time fields to create a repeating event.

Action	Raise or lower relay, enable alarm, disable alarm.
Relay	User-defined name of the raise or lower relay, alarm enable/disable (status input, analog input, silence sensor or power failure).
Month	Select the month when the event should occur, or ALL if the event should occur during every month.
Day of Month	Select the calendar day when the event should occur, or ALL if the event should occur every calendar day.
Day of Week	Check the day(s) of the week on which the event should occur. Check all boxes if the event should occur every day of the week.
Hour	Select the hour when the event should occur, or ALL if the event should occur every hour.
Minute	Select the minute when the event should occur, or ALL if the event should occur every minute.
Second	Select the second when the event should occur, or ALL if the event should occur every second.
OK	Saves the event and exits.
Cancel	Exits without saving the event.

Examples:

- 1 - To set up an event that occurs at 12:01AM on January 1, select Month=January, Day of Month=1, Hour=00, Minute=01, Second=00.
- 2 - To set up an event that occurs every Tuesday at 9:15AM, select Month=All, Day of Week=Tuesday, Hour=09, Minute=15, second=00.

A single event can be defined quite flexibly. However, complex schedules might require multiple events. For example, to schedule an event that occurs at 16:30 on March 31, June 30, September 30, and December 31 would require four separate event entries.

Analog Setup Dialog

Label	Units	Current Value	Low Alert	High Alert	Alert 1	Alert 2	Alert 3	Alert 4	
Analog 1	Units 1	0.00	0	1023	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Set
Analog 2	Units 2	0.00	0	1023	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Set
Analog 3	Units 3	408.00	0	1023	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Set
Analog 4	Units 4	407.00	0	1023	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Set
Temperature	<input type="radio"/> Degrees C <input checked="" type="radio"/> Degrees F		-40.00	190.40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Set

Close

Java Applet Window

Analog Label	Changes the label associated with any of the analog registers.
Units	Changes the units label associated with any of the analog registers.
Current Value	Sets the analog scaling factor by associating the current A/D value with the user-supplied value.
Low Alert	A low alert is issued when the analog value falls below this value.
High Alert	A high alert is issued when the analog value exceeds this value.
Alert Flag	Enables alerts for this analog register.
Email Recipients	Specifies which e-mail recipients receive the alert.
Set	Sets parameters for the analog channel using the current actual value.
Close	Exit the analog setup dialog.

NOTE: The analog value portion of the display will flash for any channel in an alarm condition and will cause the PC to beep if enabled.

Status/Relay Setup Dialog

Raise Relay Label

Raise 1
Raise 2
Raise 3
Raise 4

Lower Relay Label

Lower 1
Lower 2
Lower 3
Lower 4

Status Indicator Label

	ON Alert	1	2	3	4	OFF Alert	1	2	3	4
Status 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Status 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Status 3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Status 4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Power Failure	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Silence Sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


OK Cancel

Java Applet Window

Raise Relay Label	Changes the label associated with any of the raise relays
Lower Relay Label	Changes the label associated with any of the lower relays
Status Indicator Label	Changes the label associated with any of the status items

WEBSITE:

Visit our web site for product updates and additional information.

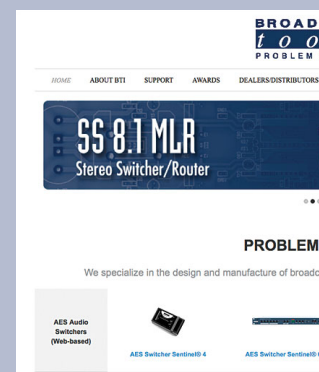

WEB SETUP

ON Alert	Enables alerts when this status item changes from OFF to ON.
ON Email Recipients	Specifies which e-mail recipients receive the ON alert
OFF Alert	Enables alerts when this status item changes from ON to OFF.
OFF Email Recipients	Specifies which e-mail recipients receive the OFF alert.
OK	Save the settings and exit.
Cancel	Exit without saving settings.

NOTE: The LED will flash for any status channel in an alarm condition and will cause the PC to beep, if enabled.

Virtual Channel Setup Dialog

Label	Units	Analog 1	Analog 2	Constant
Virtual 1	Units 1	Analog 1	Analog 1	
Virtual 2	Units 2	Analog 1	Analog 1	
Virtual 3	Units 3	Analog 1	Analog 1	
Virtual 4	Units 4	Analog 1	Analog 1	

OK Cancel


Java Applet Window

The WVRC-4 lets you define up to four “virtual” channels. These are similar to analog channels, but their values are derived from the product of two real analog channels and a constant.

Label	Changes the label associated with any of the virtual channels.
Units	Changes the engineering units label of any virtual channel.
Analog 1	Selects the first of two analog channels used in the calculation.
Analog 2	Selects the second of two analog channels used in the calculation.
Constant	Specifies the constant used in the calculation.
OK	Saves the settings and exits.
Cancel	Exits without saving settings.

Example: Assume analog channel 1 shows voltage in volts and analog channel 2 shows current in amps and an efficiency factor of 72%. You would define a virtual channel showing indirect power in Watts by setting Label=Indirect Power, Units=”Watts”, Analog 1=Voltage, Analog 2=Current, Constant=0.72


About Dialog

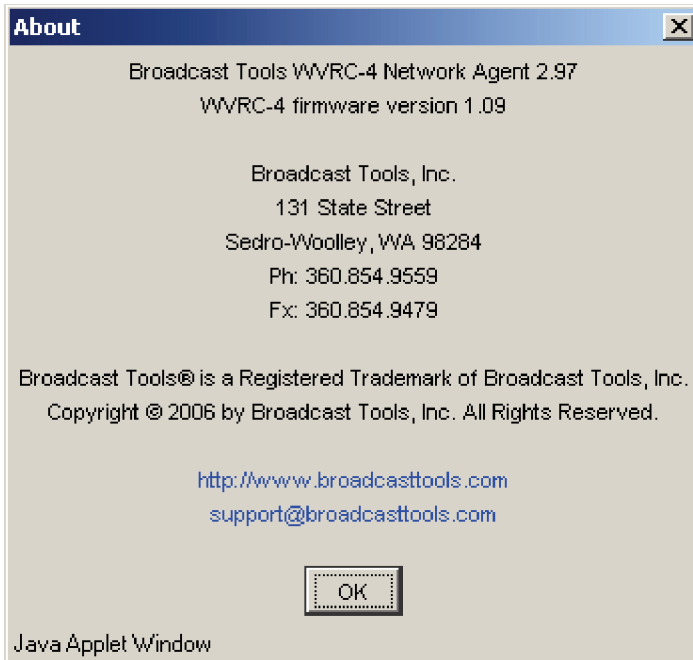

The About dialog displays the firmware version number, Broadcast Tools contact information, web link, and e-mail link.

WEBSITE:

Visit our web site for product updates and additional information.

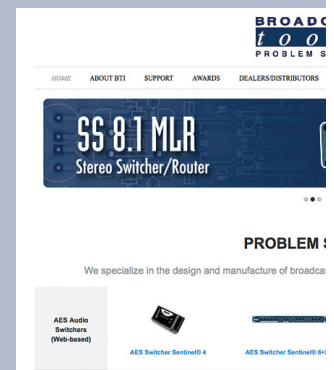

Specifications

Ethernet Interface:	RJ-45, 10Base-T or 100Base-TX, auto sensing with Link & activity indicator - Full/half duplex.
Control Logic:	Microprocessor with non-volatile memory.
Temperature Sensor:	Sensor with 25-foot cable and 3.5mm T/R/S plug. -40°F to +190°F (-40°C to +85°C)
Silence Sensor:	Stereo unbalanced 10K ohm inputs. MIL, -20dBu. Trip level and telco send adjustable
Relays:	Eight SPDT dry contacts, 24 VDC @ 1 Amp. May be configured for 1-second momentary or latching operation.


CAUTION! For safety, never connect 120 Vac circuits to these relays!

Analog (metering) inputs:	Four - Single ended 0 to 10 VDC input range. 10-bit resolution. RFI protection.
Status inputs:	Four - Optically Isolated, RFI protection. Internal jumper for (Wet, floating) external 5 to 24 VDC or internal 5 VDC source (Dry). Open collector, contact closures to ground or external source.
Power Failure opto-isolated input:	6 to 12vDC @ 50ma. 2.1mm x 5.5mm coaxial connector.
Connectors:	Analog (metering), Status, Relays and Audio I/O - Plug-in euroblock screw terminals.
Telco:	Standard POTS line.
Protocols:	TCP/IP, UDP/IP, ARP, ICMP, SNMP, TFTP, Telnet, DHCP, BOOTP, HTTP, and AutoIP.
EMI / FCC Compliance:	See the Declaration of Conformity page. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including that which may cause undesired operation.

Power:	12 VAC only @ 1 amp. 2.1mm x 5.5mm coaxial connector. Surge protected. Transformer supplied.
Operating Temperature:	-40°F to +185°F (-40°C to +85°C)
Size:	1/2 rack space, 8.50" x 6.50" x 1.55" (WDH), painted chassis with 4 - 6-32 mounting holes.
Weight:	2.0 lb.
Options:	RA-1, 1-RU rack shelf. CE certified 240VAC power supply. Smart USB to RS-232 Serial adapter cable. LR-5, 5-pole Latching relay.

WEBSITE:

Visit our web site for product updates and additional information.

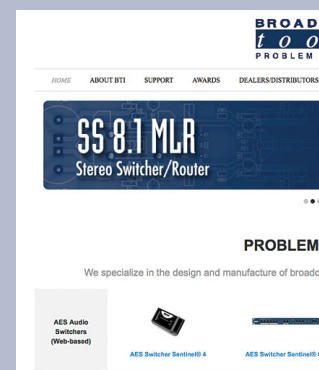

SPECIFICATIONS

LIMITED WARRANTY

The term “Buyer” as used in this document refers to and includes both (but only) (a) any person or entity who acquires such an item for the purpose of resale to others (i.e., a dealer or distributor of an item), and (b) the first person or entity who acquires such an item for such person’s or entity’s own use.

Broadcast Tools warrants to each Buyer of any item manufactured by Broadcast Tools that the item will be free from defects in materials and workmanship at the time it is shipped by Broadcast Tools if the item is properly installed, used and maintained.

EXCLUSIVE REMEDIES

If Broadcast Tools is notified, in writing, of a failure of any item manufactured by Broadcast Tools to conform to the foregoing Limited Warranty within one (1) year following the date of the Buyer’s acquisition of the item, and if the item is returned to Broadcast Tools in accordance with Broadcast Tools’ instructions for confirmation by inspection of the defect (which at Broadcast Tools’ election may include, without limitation, a requirement that the Buyer first obtain a Return Authorization number from Broadcast Tools, that the Buyer furnish proof of purchase in the form of an invoice and/or receipt, and that the Buyer prepay all freight charges associated with any return of the item to Broadcast Tools using such freight service as Broadcast Tools reasonably may specify), Broadcast Tools will repair or replace the defective item, or will refund the purchase price paid by the Buyer for the item. Broadcast Tools shall have the exclusive right to choose between these alternative remedies.

NO OTHER WARRANTIES OR REMEDIES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BROADCAST TOOLS AND ITS SUPPLIERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; AND THE FOREGOING ALTERNATIVE REMEDIES SHALL BE EXCLUSIVE OF ALL OTHER REMEDIES. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NEITHER BROADCAST TOOLS NOR ANY OF ITS SUPPLIERS SHALL HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ANY DAMAGES FOR LOST PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA OR INFORMATION, COST OF CAPITAL, CLAIMS OF CUSTOMERS, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR THE INABILITY TO USE ANY ITEM SUPPLIED BY BROADCAST TOOLS, EVEN IF BROADCAST TOOLS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER A CLAIM IS ONE ALLEGING BREACH OF A CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT, FOR THE VIOLATION OF ANY STATUTORY DUTY, THE FAILURE OF ANY LIMITED OR EXCLUSIVE REMEDY TO ACHIEVE ITS ESSENTIAL PURPOSE, OR ANY OTHER CLAIM OF ANY NATURE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, THIS LIMITATION MAY NOT APPLY TO YOU.

Broadcast Tools, Inc.

131 State Street
Sedro-Woolley, WA 98284 • USA

360.854.9559 **voice** • 866.783.1742 **fax**
support@broadcasttools.com **e-mail**
www.broadcasttools.com **website**

Declaration of Conformity

The XPort Device contained in the WVRC-4 conforms to the following standards:
(according to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name & Address:

WVRC-4: Broadcast Tools, Inc. 131 State Street, Sedro Woolley, WA 98284-1503
USA

XPort: Lantronix 15353 Barranca Parkway, Irvine, CA 92618 USA

Declares that the following product:

Product Name Model: XPort™ Device Server

Conforms to the following standards or other normative documents:

Electromagnetic Emissions:

EN55022: 1998 (IEC/CSP122: 1993) Radiated RF emissions, 30MHz-1000MHz

Conducted RF Emissions – Telecom Lines – 150KHz – 30MHz

FCC Part 15, Subpart B, Class B

IEC 1000-3-2/A14: 2000

IEC 1000-3-3: 1994

Electromagnetic Immunity:

EN55024: 1998 Information Technology Equipment-Immunity Characteristics

Direct ESD, Contact Discharge

Indirect ESD

Radiated RF Electromagnetic Field Test

Electrical Fast Transient/Burst Immunity

RF Common Mode Conducted Susceptibility

Power Frequency Magnetic Field Test

Manufacturer's Contact:

WVRC-4

Broadcast Tools, Inc.

131 State Street

Sedro Woolley, WA 98284-1503 USA

Tel: 360 . 854 . 0608 Fax: 866 . 783 . 1742

XPORT

Lantronix:


Director of Quality Assurance

15353 Barranca Parkway, Irvine, CA 92618 USA

Tel: 949.453.3990 Fax: 949.453.3995

WEBSITE:

*Visit our web site for
product updates and
additional information.*

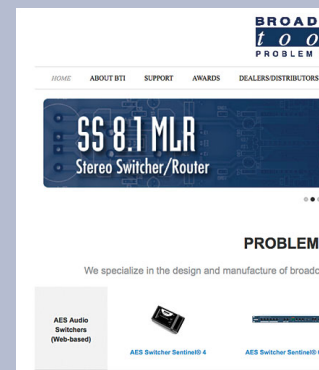

CONFORMITY

BROADCAST[®]
t o o l s[™]
tinyTOOLS[™]
POWERED BY BROADCASTTOOLS[®]
Sentinel[®] TOOLS

BROADCAST[®]
t o o l s[™]
tinyTOOLS[™]
POWERED BY BROADCASTTOOLS[®]
Sentinel[®] TOOLS

BROADCAST[®]
t o o l s[™]
tinyTOOLS[™]
POWERED BY BROADCASTTOOLS[®]
Sentinel[®] TOOLS

Broadcast Tools[®]

Connection suggestion when using listed * equipment with DSL/Telco

