

Entering Configuration Mode via the WVRC-8 Plus Serial Port:

To change or reset the WVRC's network settings via a RS232 serial connection:

1. Remove power and turn **ON** DIPswitch 5 (down).
2. Connect a PC running a serial terminal program like Tera Term, PuTTY, or HyperTerminal to the WVRC's DB9 serial port. The default serial port settings are **9600 baud, 8 bits, no parity, 1-stop bit, no-flow control**.
3. Click inside the terminal window and hold down the **x** key on your keyboard while re-powering the WVRC.

4. When you receive the BTI Setup prompt in the terminal window, remove your finger from the **x** key and immediately press the enter key to obtain the setup menu. If prompted for a password enter: **sbti**

***** BTI Setup *****

MAC address 00204ACCBF90

Software version VSS16X_BN0001 (130528) CPK6500_XPTEX

Press Enter for Setup Mode

5. Type 0 to choose menu option **0 Server Configuration** and change network settings:

***** basic parameters**

Hardware: Ethernet TPI

IP addr 192.168.1.55, gateway 192.168.1.1, netmask 255.255.255.0

Change Setup:

0 Server configuration

9 save and exit

Your choice ?

Exiting WVRC-8 Plus Configuration Mode:

1. To save all changes and reboot the device, type 9 to select option **9 save and exit** from the Change Setup menu. All values are stored in nonvolatile memory.
2. Remove power and turn DIP switch 5 **OFF** (up).
3. Re-apply power to the WVRC.