


BROADCAST
tools INC.
PROBLEM SOLVED

Installation and Operation Manual

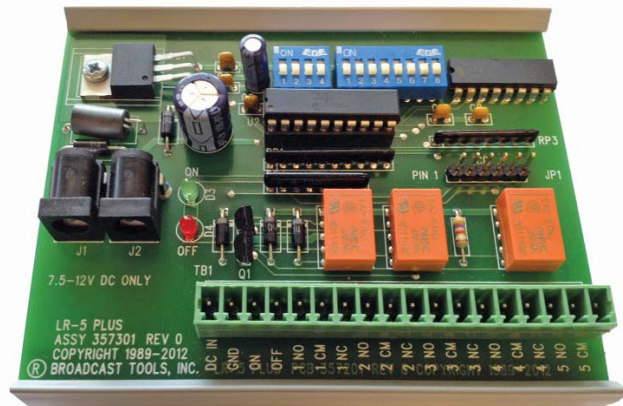

LR-5 Plus *Smart Mechanical Latching Relay*

Manual update: 08/27/2012

No part of this document may be reproduced or distributed without permission.
ALL SPECIFICATIONS AND FEATURES FOR THIS PRODUCT ARE SUBJECT TO
CHANGE WITHOUT NOTICE

NOTE: We recommend the use of Chrome, Firefox or Safari as your browser.

Due to the dynamic nature of product design, the information contained in this document is subject to change without notice. Broadcast Tools, Inc., assumes no responsibility for errors and/or omissions contained in this document. Revisions of this information or new editions may be issued to incorporate such changes.

*Broadcast Tools® is a registered trademark of Broadcast Tools, Inc.
tiny TOOLS™ is a trademark of Broadcast Tools, Inc.
All Sentinel® labeled products are registered trademarks of Broadcast Tools, Inc.
Copyright® 1989 - 2012 by Broadcast Tools, Inc. All rights reserved.
No part of this document may be reproduced or distributed without permission.*

Visit www.broadcasttools.com for important product update information.

Table of Contents

Section Title	Page #
Introduction	3
Safety Information	3
Who to Contact for Help	3
Product Overview	4
Inspection	4
 Installation	 5
 Setup.	 5
Function modes	6
Timing settings	7
 Operation	 8
Specifications	9
Warranty	10
 Fractional Schematic	 Appendix
Circuit board assembly drawing	Appendix

WEBSITE:
Visit our web site for product updates and additional information.



INTRODUCTION

Thank you for your purchase of the Broadcast Tools® LR-5 Plus, smart mechanical latching relay, which we will refer to throughout the manual as the LR-5 Plus. We're confident this product will give you many years of dependable service. This manual is intended to give you all the information needed to install and operate the product.

SAFETY INFORMATION

Only qualified technical personnel should install Broadcast Tools products. Any attempt to install this device by a person who is not technically qualified could result in a hazardous condition to the installer or other personnel or damage Broadcast Tools product or other equipment. Please ensure that proper safety precautions have been taken before installing this device. If you are unfamiliar with this type of equipment, please contact a properly qualified engineer to handle the installation and setup of the Broadcast Tools product.

Broadcast Tools, Inc., is unable to support NON-Broadcast Tools software, hardware or NON-Broadcast Tools computer/hardware/software problems. If you experience these problems, please research your hardware/software instruction manuals or contact the manufacturers technical support department.

WHO TO CONTACT FOR HELP

If you have any questions regarding your product or you need assistance, please contact your distributor from whom you purchased this equipment.

If you would like more information about Broadcast Tools® products, you may reach us at:

Broadcast Tools, Inc.
131 State Street
Sedro-Woolley, WA 98284-1503 USA
Voice: 360.854.9559
Fax: 866.783.1742

Internet Home Page: www.broadcasttools.com
E-mail: support@broadcasttools.com

**THANK YOU FOR CHOOSING
BROADCAST TOOLS® BRAND PRODUCTS!**



Assembled in the USA,
by American Workers



CAUTION!

Broadcast Tools® Products, as with any electronic device, can fail without warning. Do not use this product in applications where a life threatening condition could result due to failure.



NOTE:

This manual should be read thoroughly before installation and operation.

WEBSITE:

Visit our web site for product updates and additional information.



PRODUCT DESCRIPTION

The LR-5 Plus is a mechanical latching relay with one set of four pole double throw contacts and one set of single pole normally open contacts. The LR-5 Plus provides two control inputs which may be configured for sustained, toggle, set-reset (flip-flop), dual alternate action or falling/rising edge, along with additional Boolean logic functions. The LR-5 Plus may be used to switch all types of audio, AES and AC/DC circuits. Additional features include; Independent user programmable logic and pulse stretching (delays) from 100 milliseconds to 12.7 seconds in 100 millisecond steps, or 10 seconds to 21 minutes and 10 seconds in 10 second steps, removable euro-block screw terminals and LED indicators to display relay ON/OFF. The LR-5 Plus assembly is housed in a plastic snap track.

FEATURES

- One set of four pole double throw mechanical latching relay contacts and one set of single pole normally open mechanical latching relay contacts.
- Two configurable control inputs (closure to ground).
- Fifteen logic functions include sustained, toggle, set-reset (flip-flop), dual alternate action or falling/rising edge, along with additional Boolean logic functions.
- The independent pulse stretcher or time delays may be configured from 100ms to 12.7 seconds in 100 millisecond steps, or 10 sec. to 21 minutes and 10 seconds in 10 second steps.
- On/Off LED indicators are provided for relay position status
- A four-position dipswitch is provided for logic function configuration and an eight-position dipswitch is provided for timing configuration.
- Dual power jacks allows for the daisy chaining of units from one wall supply as well as a DC in connection on the terminal block.
- All I/O connections via removable euro-block screw terminals.

APPLICATIONS

- Convert differing logic levels to mechanical latching contact closures.
- Time delay relay.
- Pulse stretcher.
- Sustained contact to pulse converter.
- Rising and/or falling edge pulse converter.
- Latching (flip-flop) relay.
- Toggle action relay.
- Dual alternate action relay.
- Additional Boolean logic functions include; XOR, AND, NAND, OR, NOR.

INSPECTION

Please examine your LR-5 Plus carefully for any damage that may have been sustained during shipping. If any is noted, please notify the shipper immediately and retain the packaging for inspection by the shipper. The package should contain the LR-5 Plus installed in a plastic snap track, a DC wall power transformer, and this manual.

Installation of the LR-5 Plus in high RF environments should be performed with care. Surge protection with RF filtering such as the Tripp-Lite "ISOBAR 4 or 6" is also suggested for the wall transformer.

WEBSITE:

Visit our web site for product updates and additional information.



DESCRIPTION

INSTALLATION

The LR-5 Plus interfaces with your equipment through a removable euro-block screw terminal (TB1). Follow the labels on the circuit board for all connections. Refer to the terminal functions below. Unplug the plug and remove about 1/8" of insulation from the wire, insert the wire into the plug, and tighten the screw. Reinsert the plug when finished. Be certain that no bare wires are exposed. The terminals accommodate wire sizes from 18 - 28 AWG solid or stranded wire.

TB1, Terminal Connections / Pin-out

Pin 1 = DC IN (+7.5-12 VDC Input)	Pin 10 = Contact 2 N.C.
Pin 2 = GND (Ground)	Pin 11 = Contact 3 N.O.
Pin 3 = Relay ON (Odd)	Pin 12 = Contact 3 Common (wiper)
Pin 4 = Relay OFF (Even)	Pin 13 = Contact 3 N.C.
Pin 5 = Contact 1 N.O.	Pin 14 = Contact 4 N.O.
Pin 6 = Contact 1 Common (wiper)	Pin 15 = Contact 4 Common (wiper)
Pin 7 = Contact 1 N.C.	Pin 16 = Contact 4 N.C.
Pin 8 = Contact 2 N.O.	Pin 17 = Contact 5 N.O.
Pin 9 = Contact 2 Common (wiper)	Pin 18 = Contact 5 Common (wiper)

Note: N.C. refers to the relay being OFF.

Mounting the LR-5 Plus may take many forms. The LR-5 Plus may be removed from the snap track for alternate mounting. The plastic snap track can be screwed, cable tied or velcro'ed to most surfaces. An optional DIN rail and clips may be purchased from other manufacturers to mount the snap track to a DIN rail.

When installation is complete, proper power can be applied to either jack J1, J2, or the DC IN/GND connection on TB1. The additional jack is supplied for daisy-chaining multiple LR-5 Plus's.

SETUP

The LR-5 Plus has two sets of dipswitches which are used to configure the device's operating behavior. The **FUNCTION** dipswitches set the function mode and the **TIMING** dipswitches set the timing (when used.) **In order for any new settings to take effect the LR-5 Plus must be power-cycled.**

WEBSITE:

Visit our web site for product updates and additional information.




Function Modes


The function dipswitches are weighted in binary: SW1=1, SW2=2, SW3=4, SW4=8
Add the weighted values to get the mode number.

Mode Function Description

Mode	Function Dipswitch	Description
0=Off,1=On		
0	0000	The relay closes on the leading edge of the odd input. Relay remains closed until the leading edge of the even input is active.
1	1000	Relay toggles on leading edge of the odd input.
2	0100	Relay closes when the odd input is active and opens when the odd input is inactive.
3	1100	The relay closes after the odd input has been active for the programmed time period. It opens after the even input is closed for the time period.
4	0010	The relay closed on the leading edge of the odd input. The relay opens after the trailing edge is closed for the time period.
5	1010	Relay closes on leading edge of the odd input for time period.
6	0110	Relay closes for the time period on the trailing edge of the odd input.
7	1110	Relay closes for the time period on the leading or trailing edge of the odd input.
8	0001	Relay closes on leading edge of the odd input and remains closed for at least the time period. If the odd input stays active for longer than the time period, the relay will open on the trailing edge of the odd input.
9	1001	Relay closes on the leading edge of the odd input for no longer than the time period. If a trailing edge is encountered before the time has expired, the relay will open with the edge. Otherwise, the relay opens when the time period expires.
10	0101	Two input NOR (0 = input inactive, 1 = active) 00 = 1 01 = 0 10 = 0 11 = 0
11	1101	Two input OR 00 = 0 01 = 1 10 = 1 11 = 1
12	0011	Two input XOR 00 = 0 01 = 1 10 = 1 11 = 0
13	1011	Two input AND 00 = 0 01 = 0 10 = 0 11 = 1
14	0111	Two input NAND 00 = 1 01 = 1 10 = 1 11 = 0

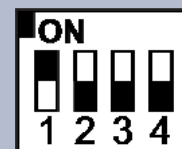

Mode 1
(1)

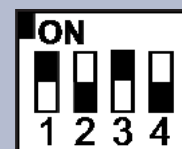

Mode 5
(1+4)

WEBSITE:

Visit our web site for product updates and additional information.



INSTALLATION

Timing

The function dipswitches are weighted in binary: 1,2,4,8,16,32,64. SW-8 sets the time resolution multiplier, either 100 ms. (Off) or 10 sec. (On.)

100 Millisecond Resolution Mode: From 100 milliseconds to 12.7 seconds in 100 millisecond steps. Examples:

Time	SW-1 (1)	SW-2 (2)	SW-3 (4)	SW-4 (8)	SW-5 (16)	SW-6 (32)	SW-7 (64)	SW-8 (Resolution)
100 ms.	On	Off	Off	Off	Off	Off	Off	Off
200 ms.	Off	On	Off	Off	Off	Off	Off	Off
300 ms.	On	On	Off	Off	Off	Off	Off	Off
400 ms.	Off	Off	On	Off	Off	Off	Off	Off
500 ms.	On	Off	On	Off	Off	Off	Off	Off
600 ms.	Off	On	On	Off	Off	Off	Off	Off
700 ms.	On	On	On	Off	Off	Off	Off	Off
800 ms.	Off	Off	Off	On	Off	Off	Off	Off
900 ms.	On	Off	Off	On	Off	Off	Off	Off
1 sec.	Off	On	Off	On	Off	Off	Off	Off
1.1 sec.	On	On	Off	On	Off	Off	Off	Off
2 sec.	Off	Off	On	Off	On	Off	Off	Off
3 sec.	Off	On	On	On	On	Off	Off	Off
4 sec.	Off	Off	Off	On	Off	On	Off	Off
5 sec.	Off	On	Off	Off	On	On	Off	Off
12 sec.	Off	Off	Off	On	On	On	On	Off
12.7 sec.	On	On	On	On	On	On	On	Off



100 milliseconds
(1) x 100ms.



5 seconds
(2+16+32) x 100ms.
= 5000 ms. = 5 sec.

NOTE:

The timing settings only apply to function modes 3-9. When all of the timing switches are in the off position the timing feature is disabled.

WEBSITE:

Visit our web site for product updates and additional information.



INSTALLATION

Timing

10 Second Resolution Mode: From 10 seconds to 21 minutes and 10 second in 10 second steps. Examples:

Time	SW-1 (1)	SW-2 (2)	SW-3 (4)	SW-4 (8)	SW-5 (16)	SW-6 (32)	SW-7 (64)	SW-8 (Resolution)
10 sec.	On	Off	Off	Off	Off	Off	Off	On
20 sec.	Off	On	Off	Off	Off	Off	Off	On
30 sec.	On	On	Off	Off	Off	Off	Off	On
40 sec.	Off	Off	On	Off	Off	Off	Off	On
50 sec.	On	Off	On	Off	Off	Off	Off	On
60 sec.	Off	On	On	Off	Off	Off	Off	On
70 sec.	On	On	On	Off	Off	Off	Off	On
80 sec.	Off	Off	Off	On	Off	Off	Off	On
90 sec.	On	Off	Off	On	Off	Off	Off	On
100 sec.	Off	On	Off	On	Off	Off	Off	On
110 sec.	On	On	Off	On	Off	Off	Off	On
2 min.	Off	Off	On	On	Off	Off	Off	On
3 min.	Off	On	Off	Off	On	Off	Off	On
4 min.	Off	Off	Off	On	On	Off	Off	On
5 min.	Off	On	On	On	On	Off	Off	On
21 min	Off	On	On	On	On	On	On	On
21.1 min	On	On	On	On	On	On	On	On



10 seconds
(1) x 10 sec. = 10 sec.



5 minutes
(2+4+8+16) x 10 sec.
= 300 sec. = 5 min.



The timing settings only apply to function modes 3-9. When all of the timing switches are in the off position the timing feature is disabled.

WEBSITE:

Visit our web site for product updates and additional information.



INSTALLATION

OPERATION

The LR-5 Plus ships in Mode 0. In Mode 0 to turn the relay ON, place a momentary contact closure across the GND and “ON” terminals.

To turn the relay OFF, place a momentary contact closure across the GND and “OFF” terminals.

Please refer to the Function Modes section of this manual for a description of each function mode and setup instructions.



The LR-5 Plus utilizes mechanical latching relays, removing power DOES NOT force the relay to open.

WEBSITE:

Visit our web site for product updates and additional information.



SPECIFICATIONS

Control inputs: ON (Odd), and OFF (Even). Activate by grounding one or both input(s).

Mechanical Latching Relays:

Contact form: 2 x 2 form C and 1 – form A
Contact material: Silver alloy with gold alloy overlay
Maximum switching voltage: 30vdc
Maximum switching current: 1 amp
Minimum contact ratings: 10 mVdc, 10 μ A (resistive)

CAUTION! For safety, never connect 120 Vac circuits to these relays!

Connectors: Removable euroblock screw terminals

Power Requirement: 7.5 to 12 VDC only @ up to 1 amp. 2.1mm ID x 5.5mm OD coaxial connector. Surge protected. Domestic PS supplied

Size: 3.00" x 4.00" x 1.00", supplied with a plastic snap-track.

Weight: 1.0 lb.

Options: * CE certified universal power supply.

WEBSITE:

Visit our web site for product updates and additional information.



LIMITED WARRANTY

The term “Buyer” as used in this document refers to and includes both (but only) (a) any person or entity who acquires such an item for the purpose of resale to others (i.e., a dealer or distributor of an item), and (b) the first person or entity who acquires such an item for such person’s or entity’s own use.

Broadcast Tools warrants to each Buyer of any item manufactured by Broadcast Tools that the item will be free from defects in materials and workmanship at the time it is shipped by Broadcast Tools if the item is properly installed, used and maintained.

EXCLUSIVE REMEDIES

If Broadcast Tools is notified, in writing, of a failure of any item manufactured by Broadcast Tools to conform to the foregoing Limited Warranty within one (1) year following the date of the Buyer’s acquisition of the item, and if the item is returned to Broadcast Tools in accordance with Broadcast Tools’ instructions for confirmation by inspection of the defect (which at Broadcast Tools’ election may include, without limitation, a requirement that the Buyer first obtain a Return Authorization number from Broadcast Tools, that the Buyer furnish proof of purchase in the form of an invoice and/or receipt, and that the Buyer prepay all freight charges associated with any return of the item to Broadcast Tools using such freight service as Broadcast Tools reasonably may specify), Broadcast Tools will repair or replace the defective item, or will refund the purchase price paid by the Buyer for the item. Broadcast Tools shall have the exclusive right to choose between these alternative remedies.

NO OTHER WARRANTIES OR REMEDIES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BROADCAST TOOLS AND ITS SUPPLIERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; AND THE FOREGOING ALTERNATIVE REMEDIES SHALL BE EXCLUSIVE OF ALL OTHER REMEDIES. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES


TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NEITHER BROADCAST TOOLS NOR ANY OF ITS SUPPLIERS SHALL HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ANY DAMAGES FOR LOST PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA OR INFORMATION, COST OF CAPITAL, CLAIMS OF CUSTOMERS, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR THE INABILITY TO USE ANY ITEM SUPPLIED BY BROADCAST TOOLS, EVEN IF BROADCAST TOOLS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER A CLAIM IS ONE ALLEGING BREACH OF A CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT, FOR THE VIOLATION OF ANY STATUTORY DUTY, THE FAILURE OF ANY LIMITED OR EXCLUSIVE REMEDY TO ACHIEVE ITS ESSENTIAL PURPOSE, OR ANY OTHER CLAIM OF ANY NATURE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, THIS LIMITATION MAY NOT APPLY TO YOU.

Broadcast Tools, Inc.

131 State Street
Sedro-Woolley, WA 98284 • USA

360.854.9559 **voice** • 866.783.1742 **fax**
support@broadcasttools.com **e-mail**
www.broadcasttools.com **website**

Fractional Schematic

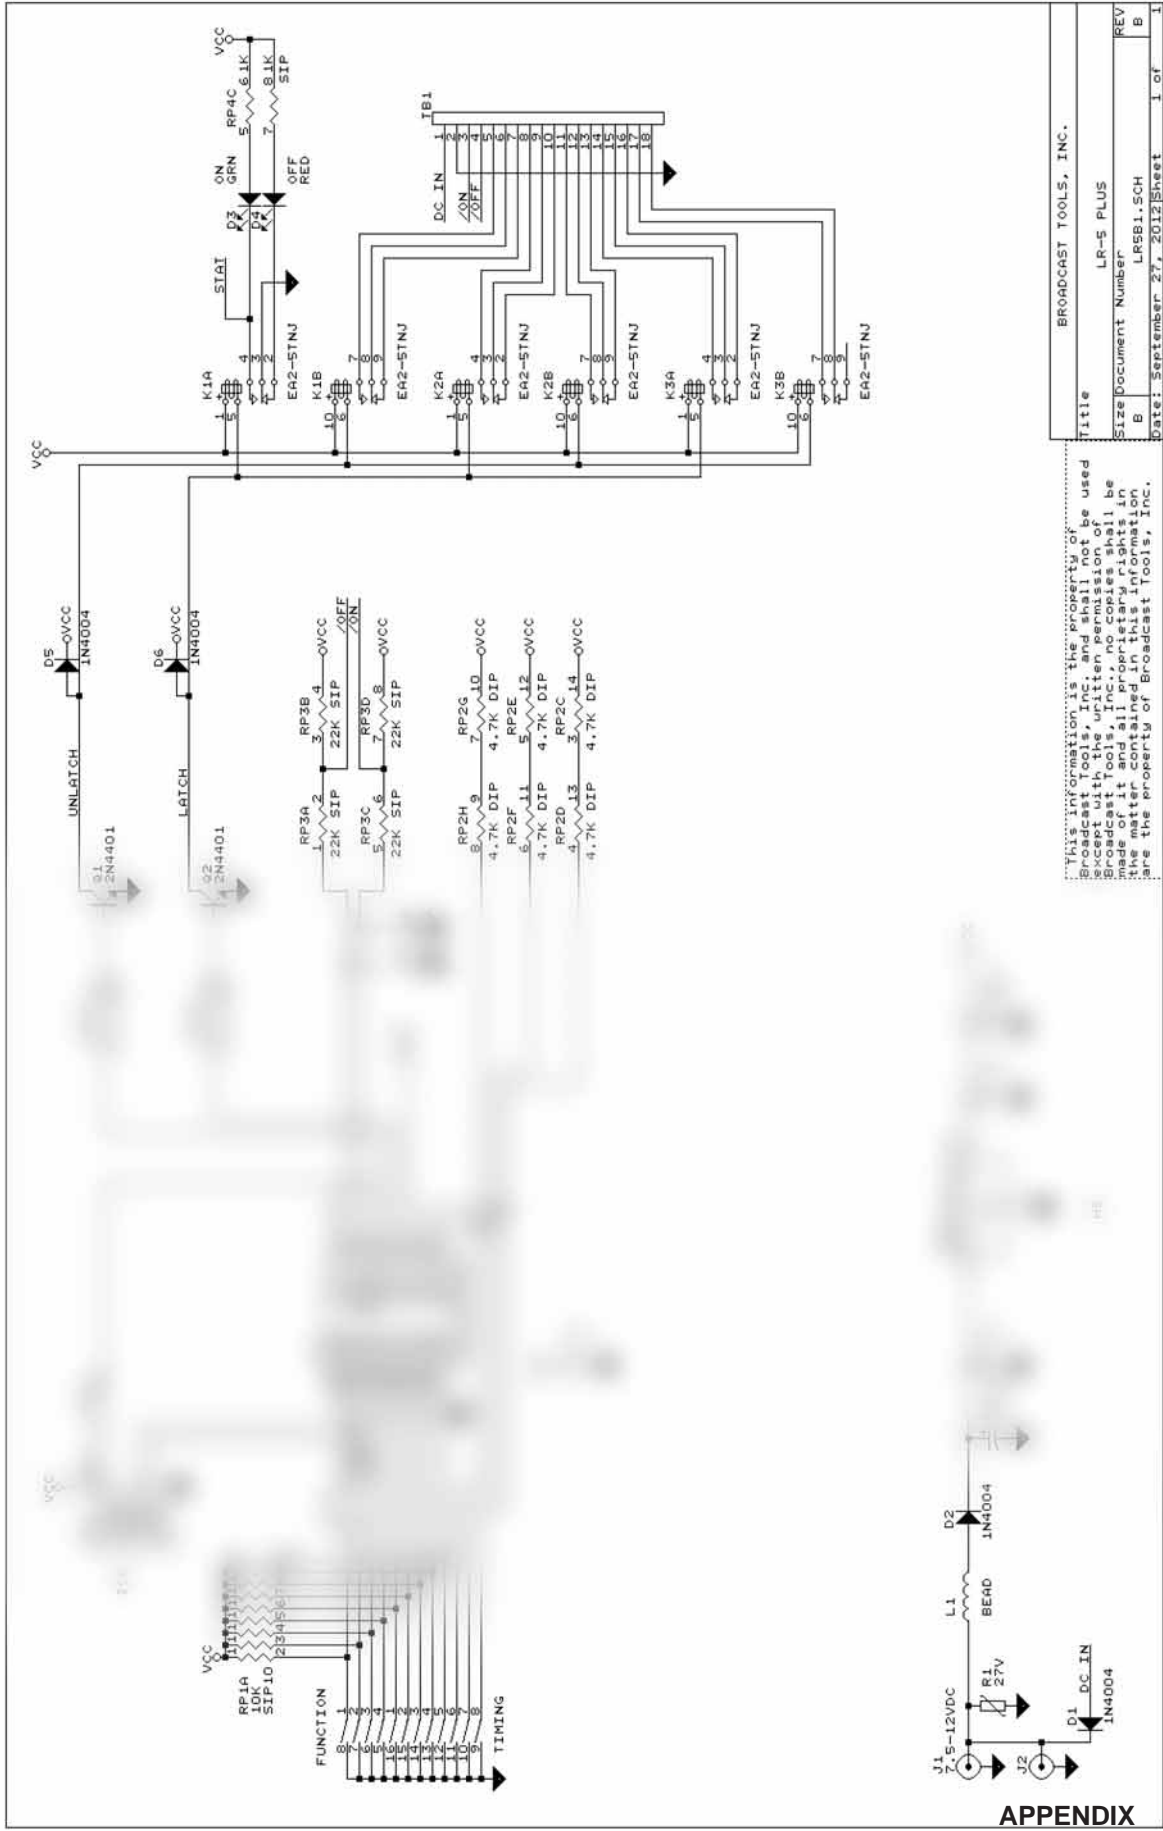

Broadcast Tools® LR-5 Plus

Component Layout

